

Design for explosive atmospheres:

Fixed closure pursuant to EN 60079-0 and EN 60079-1,

⊕ II 2 G Ex db IIC T6...T1 Gb

(Meaning of designation - see figure 3)

Dust-tight closure pursuant to EN 60079-0 ed. 4 and EN 60079-31:

⊕ II 2 D Ex tb IIC T 90°C ...Tx°C Db

(Meaning of designation - see figure 3)

Intrinsically safe pursuant to EN IEC 60079-0 and EN 60079-11:

⊕ II 1 G Ex ia IIC T5/T6 Ga

(Meaning of designation - see figure 4)

P_i = 192 mW T6 (-60°C ≤ Ta ≤ 60°C)

P_i = 290 mW T6 (-60°C ≤ Ta ≤ 55°C)

T5 (-60°C ≤ Ta ≤ 65°C)

Intrinsically safe circuit parameters:

only for Pt 100, with measuring insert Ø6

Input

U_i = 60 V

I_i = 100 mA

P_i = 192 mW / 290 mW

C_i = 780 pF/m

L_i = 0,6 µH/m



WARNING



The device must be installed in a housing that meets the degree of protection against intrusion of at least IP 20.

The casing of the measuring insert is not separated from the inner intrinsically safe circuit according to the standard EN 60079-11. This information must be taken into account during installation.

Intrinsically safe version with converter:

according to built-in converter

Electric strength pursuant to EN 61010-1, Article 6.8.3:

500 V eff (only measuring insert without converter or design with insulated converter)

Electric insulation resistance pursuant to EN IEC 60751

min. 100 MΩ, at 15 to 35°C, max. 80 % relative humidity

min 100 V DC

Power supply of converter:

DC 24 V from source SELV, e.g. INAP 16 and INAP 901

Other data of converter: refer to the enclosed manual

Display: LED display to loop 4-20mA

other data refer to enclosed manual

Ingress protection pursuant to EN 60529: IP 68

Operation position:

discretionary; the gland shall not be situated upwards

Type of operation: continuous

Sensor weight:

with adapter 135 mm 0.93 kg

Applied materials:

Thermowell	steel 1.4541
Stem tube of measuring insert	steel 1.4541
Head	aluminium alloy painted with blue epoxy colour
	steel 1.4401
Internal wiring	Cu
Head terminals of the terminal board	brass with Ni surface
Connecting elements of the sensor	stainless steel

OPERATION CONDITIONS

The environment is defined by the group of parameters and their severity grades IE 36 pursuant to EN 60721-3-3 and the following operation conditions.

Ambient temperature for head and gland of the sensor: according to the type of heads used:

- -50°C ≤ Ta ≤ 75°C for the heads of Al Alloy (XD- AD;XD-ADH)

- -50°C ≤ Ta ≤ 70°C for stainless steel heads (XD-SD)

- -40°C ≤ Ta ≤ 75°C for heads (XD-180C; XD-180Cwin)

- for design with converter (and display) pursuant to the type of converter (and display) (refer to the enclosed converter and display manual)

Maximum surface temperature of the sensor:

it complies with maximum temperature of the measured medium

Maximum surface temperature for equipment operating in the environment with a threat of explosion of gases, steam and mist pursuant to EN 60079-0 and temperature class of the sensor are determined in dependency on the temperature of measured medium pursuant to the following table:

Temperature class	Maximum surface temperature	Maximum temperature of measured medium
T6	85°C	80°C
T5	100°C	95°C
T4	135°C	130°C
T3	200°C	195°C
T2	300°C	290°C
T1	450°C	440°C

For temperatures of the measured medium greater than the limit for temperature class T1, the maximum surface temperature Tx is determined from the maximum temperature of the measured Tm media and the safety addition of 10 ° C. Tx = Tm+10 ° C.

Maximum permitted surface temperature for the equipment operating in the environment with a threat of explosion of dust pursuant to EN 60079-0:

a) Temperature limitation due to occurrence of stirred dust:

$$T_{max} = 2/3 T_{cl}$$

where T_{cl} is the temperature of ignition of stirred dust

b) Temperature limitation due to occurrence of layers of dust

$$T_{max} = T_{5\text{ mm}} - 75\text{ °C}$$

where T_{5 mm} is the temperature of ignition of dust layer 5mm thick

c) Dust layers over 5 mm – refer to EN 60079-14

Maximum permitted surface temperature is defined by the lower value of the values specified above.

Intrinsically safe measuring inserts can be used in intrinsically safe circuits of group II electrical equipment.



WARNING



The user shall guarantee that the maximum surface temperature of any part of the sensor does not exceed the temperatures of ignition of any gas, steam or dust, which can occur, due to external thermal effects.

Relative ambient humidity:

- 10 to 100 % with condensation, with upper limit of water content 29 g H2O/kg of dry air
- for converter version according to converter type (see enclosed converter instructions)
- for converter and display version according to converter and display type (see enclosed converter and display instructions)

Atmospheric pressure: 70 to 106 kPa

Vibrations:

Sensor	with converter		without converter	
	110, 140, 170	200, 260	110, 140, 170	200, 260
Nominal length L [mm]	10 to 500			
Frequency range [Hz]	10 to 500			
Drift amplitude [mm]	0.2	0.15	0.5	0.2
Acceleration amplitude [ms ⁻²]	29.4	19.6	68.7	39.2

Maximum speed of flow of liquids:

pursuant to parameters of thermowell used by the customer

METROLOGICAL DATA

Probe: measuring resistor Pt 100 in connection pursuant to the scheme and table of designs, α = 0.00385 [K⁻¹], tolerance class A or B pursuant to EN IEC 60751

Range of pair temperature differences pursuant to EN 1434: 3 to 180 K

Internal wiring resistance at 20 °C: 0.1 Ω/m

Calculated resistance value of internal wiring of the design without converter is specified on the label of the measuring insert.

Maximum current load of measuring resistor:

Pt 100 3 mA

Pt 500 1 mA

Recommended measuring current:

Pt 100 1 mA

Pt 500 0,5 mA

Output signal of the converter (linear with measured temperature):

4 to 20 mA (+ digital for HART protocol)

Calibration depth of immersion of the measuring insert of the sensor

for temperature points within range -70 to 250°C:

200 mm (min. 160 mm)

for temperature points above 250°C:

300 mm (min. 260 mm)

The distance of flange of the measuring insert from the level of medium in the calibration bath shall be at least 40 mm at temperatures to 250°C and min. 70 mm at temperatures above 250°C.

Temperature response time pursuant to EN IEC 60751 in whirling water (characteristic value):

without thermowell (separate measuring insert)

$\tau_{0,5}$ 6 s

with thermowells pursuant to DIN 43772, shape 4

(L = 100, 140)

$\tau_{0,5}$ 85 s

$\tau_{0,9}$ 250 s

with thermowells pursuant to DIN 43772, shape 4

(L = 200, 260)

$\tau_{0,5}$ 53 s

$\tau_{0,9}$ 115 s

RELIABILITY

Indicators of reliability in operation conditions and conditions of the environment specified herein

- Mean time of operation between failures 96 000 hours (inf. value)
- Expected service life 10 years

DESIGNATION:

Data of head label

- Trademark of the manufacturer
- Made in Czech Republic
- Type of resistance sensor, nominal value R_0 / tolerance class / configuration of wires of internal wiring *)
- Measuring range or set-up converter range
- Product ordering number
- Coverage
- Serial number
- Output signal 4 to 20 mA (design with converter)
- Ambient temperature
- Mark of non-explosiveness:
 - ⊕ II 2 G Ex db IIC T6...T1 Gb
 - ⊕ II 2 D Ex tb IIIC T 90°C ...Tx°C Db
 - ⊕ II 1 G Ex ia IIC T5/T6 Ga
- and number of the EU Certificate of type test
- Designation of non-explosiveness and No. of EU Certificate of type test (for design with converter Ex ia)
- CE mark 1026
- Other data for design with proof of metrological compliance (/M5)
 - o the conformity marking (CE + supplementary metrology marking) and the number of the notified person
 - o EU type examination certificate number TCM 321/12 - 4906
 - o range of temperature difference
 - o serial number /1 a /2 for unambiguous resolution of sensors for inlet and return pipes
- other data for design /M1, /M2, /M3 a /M4
- Evaluation certificate. No ZR 141/10-

*) Configuration of wires of internal wiring is not specified for the converter

Data on label of measuring insert

- Trade mark
- Sensor type, nominal value R_0 / tolerance class / Configuration of wires of internal wiring *)
- Serial number
- Resistance value of internal wiring (for design without converter)

*) Configuration of wires of internal wiring is not specified for the converter

Data on converter label

- Trade mark
- Sensor type
- Pre-set temperature range
- Designation of non-explosiveness and number of the EU-Type Examination Certificate
- the conformity marking CE (for converter Ex ia with the number of the notified person

Data on display

- Trade mark
- the conformity marking CE

DELIVERY

Unless agreed otherwise with the customer, each delivery includes

- Delivery note
- Sensor pursuant to the purchase order
- Allen key 1.5mm
- As accessories to sensors, a suitable cable gland can be delivered; it shall be ordered separately pursuant to the catalogue of accessories, type 991. An instruction sheet is delivered with each cable gland
- Suitable thermowells and nipples ordered separately pursuant to the catalogue of accessories, type 991
- Optional accessories to the sensor with programmable converter
 - o Configuration (parameterization) programme pursuant to the required converter
 - o Communication modem (for serial port RS 232C) pursuant to the required converter
- Accompanying technical documentation in Czech
 - o Product manual
 - o Product quality and completeness certificate, which also serves as the warranty certificate
 - o EU Compliance Certificate
 - o EU Declaration of Conformity for Conformity with Metrological Compliance (/ M5)

If it is established in the purchase contract or agreed otherwise, the following documentation can be also delivered with the product:

- Declaration of Conformity with purchase order 2.1 acc. to EN 10204
- Calibration sheet (for uncertified calibrated design)
- Copy of EU-Type Examination Certificate pursuant to the Directive No 2014/34/EU for fixed and dust-tight closure
- Copy of EU-Type Examination Certificate pursuant to the Directive No 2014/34/EU (ATEX) for converter Ex ia
- Copy of Evaluation certificate for design /M1, /M2, /M3 and /M4
- Test report about the seismic and the vibration qualification

CERTIFICATION

- Non-explosiveness Ex ia, EU-Type Examination Certificate pursuant to the Directive 2014/34/EU. FTZÚ 08 ATEX 0199X as amended
- Non-explosiveness Ex ia, EU-Type Examination Certificate pursuant to the Directive 2014/34/EU FTZÚ 21 ATEX 0007X
- Non-explosiveness Ex ia, EU-Type Examination Certificate pursuant to the 2014/34/EU (pursuant to the type of the converter and display)
- Declaration of metrological conformity (MID) in accordance with Module B of Directive No. 2014/32/EU, EU Type Examination Certificate No. TCM 321/12-4906
- Evaluation certificate. No. ZR 114/10-0068

CALIBRATION

It is realized pursuant to TPM 3342-94 and in compliance with EN IEC 60751, usually in three temperature points evenly distributed within the operation range of the sensor or in the points according to the requirement of the customer. Calibration sheets with measured data are issued for calibrated sensors.

ASSESSMENT OF CONFORMITY PURSUANT TO THE DIRECTIVE 2014/32 EU

Couple sensors are verified pursuant to EN 1434-5.

The sensors are rated products pursuant to the Directive 2014/32 EU of the European Parliament and the Council and EU Declaration of Conformity is issued for them.

The manufacturer performs subsequent verification under EN 1434-5. Subsequent verification is ordered in the department AMS ZPA N. Paka a.s. (ams@zpanp.cz).

For subsequent verification, send the whole couple tied together.


METHOD OF PLACING THE MARK OF ASSEMBLY AND SERVICE ORGANIZATION AND REINSURANCE MARKS

Verified sensors have a self-adhesive label with reinsurance mark. The label is stuck on the terminal board and the sensor head.

After installation on place of use the sensors will be reassured with mounting seal eventually with label, preventing unauthorized manipulation.

After subsequent verification, the sensors will be provided with a self-adhesive label with an official mark. The label will be stuck on the terminal board and the sensor head instead of the original reinsurance mark.

PLACING THE MARK OF ASSEMBLY AND SERVICE ORGANIZATION AND REINSURANCE MARKS

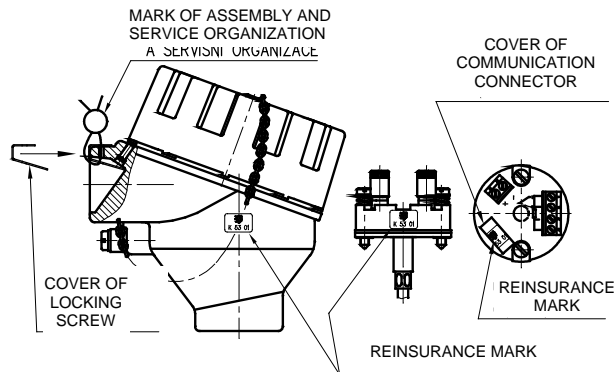

PACKING

Both sensors and accessories are delivered in a packing ensuring resistance to the impact of thermal effects and mechanical effects pursuant to controlled packing regulations.

TRANSPORT

The sensors may be transported on conditions corresponding to the set of combinations of classes IE 21 pursuant to EN IEC 60721-3-2 (i.e. by airplanes and trucks, in premises that are ventilated and protected against atmospheric conditions).

STORAGE

The sensors may be stored on conditions corresponding to the set of combinations of classes IE 11/1K3 pursuant to EN IEC 60721-3-1 (i.e. in places with temperature from -5 to 45 °C and humidity from 5 to 95%, without a special threat of an attack with biological agents, with vibrations of small significance and not situated close to sources of dust and sand).

ORDERING TEMPERATURE SENSORS

The purchase order shall specify

- Name
- Product ordering number
- Ex ia design is ordered using codes J4X, D2X or D3X according to table 1
- Additional requirements for sensor design pursuant to Table 2
- Request for other documentation pursuant to Table 2
- Measuring range
- If calibration is required and in what temperature points
- If the delivery of thermowell and nipple pursuant to the type 991 is required for the sensor as accessories
- If the delivery of gland for output cable pursuant to the type 991 is required for the sensor as accessories
- If optional accessories to the sensor with programmable converter is required
- Other (special) requirements
- Number of pieces

Behind the ordering number specified pursuant to the above mentioned table, the customer shall identify the required range of measured temperature (i.e. lower and upper temperature limits in °C) and, as the case may be, other non-standard required parameters for converter configuration (e.g. indication of sensor tripping, dampening, required designation - tagging etc.).

PURCHASE ORDER EXAMPLE

Standard design:

Resistance temperature sensor Ex d (Ex t) to thermowell DIN with connecting screw-joint on adapter without converter
235 410 511B/J4/Q1
Calibration points of 100, 250 and 400 ° C
range -70 to 450°C
6 pcs

Special requirement:

Resistance temperature sensor Ex d (Ex t) to thermowell DIN with connecting screw-joint on adapter with converter
235 910 511B/18/2.1
nominal length L 380 mm
range 0 to 100°C
6 pcs

ORDERING ACCESSORIES

The purchase order shall specify:

- Name
- Product ordering number
- Number of pieces

PURCHASE ORDER EXAMPLE

Standard design:

1. Welding thermowell pursuant to DIN, shape 4
991 DIN 407544
20 pcs
2. Nipple
991 NVP4 M27 72
6 pcs
3. Cable gland
991 VM 612
6 pcs

Special request:

Nipple
991 NVP4 D27 99
material 1.5415
6 pcs

TABLE 1 - DESIGN OF TEMPERATURE SENSORS Ex d (Ex t) TO THERMOWELL, TYPE 235

SPECIFICATIONS					ORDERING NUMBER																
					235	x	x	x	x	x	x	x	x	x	x	/xxxxxx	/xx				
Nominal length L [mm]	110	Length of adapter L _n [mm]	125 (135) ***	Length of measuring L _{mv} [mm] ****	275	1															
	140		135		315	2															
	170		125 (135) ***		335	3															
	200		135			375	4														
	260					435	5														
	410					585	6														
	Other (min. 75) *)						9														
Nominal length L [mm]	110	Length of adapter L _n [mm]	65(75) *** (Without connecting screw-joint)	Length of measuring L _{mv} [mm] ****	215	1															
	140				245	2															
	170				275	3															
	200				305	4															
	260				365	5															
	410				515	6															
	Other (min. 75) *)					9															
Length of adapter L _n [mm]	Adapter	135 (125)			1																
		65 (without connecting screw-joint) max. measuring range [°C] -70 to 250			2																
		Other(min. 65) *) **)			9																
	Spiral adapter	75 (without connecting screw-joint) max. measuring range [°C] -70 to 250			3																
		135			4																
Other(min. 75) *) **)			8																		
Thermowell material	without thermowell				0																
Connecting thread	1/2-14 NPT								5												
	Other *)								9												
Head of the sensor with thread for gland Ex d (Ex t) - overview of glands see Tab.7	Aluminium alloy painted with blue epoxy colour	M20x1.5								1											
		1/2-14NPT								2											
	Corrosion resistant steel 1.4401	M20x1.5									3										
		1/2-14NPT									4										
Tube of measuring insert [mm]	Ø6 ± 0,1									1											
	Ø3 ± 0,1 (only with connecting thread M14 x 1,5)									3											
Measuring resistor (probe)	Pt100											1									
	Pt 500												2								
	Other *)													9							
Tolerance class	A guaranteed only within range to 300°C															A					
	B															B					
Terminal board connection	Single - four-wire (1xPt)																/J4				
	Double- two-wire (2xPt/B)															B	/D2				
	Double - three-wire (2xPt/ 3)																/D3				
	Single – four-wire	only for Pt 100, with measuring insert ø 6, length of measuring										1	1				/J4X				
	Double – two-wire											1	1	B			/D2X				
	Double – three-wire											1	1				/D3X				

TABLE 1 - DESIGN OF TEMPERATURE SENSORS Ex d (Ex t) TO THERMOWELL, TYPE 235 (continuation)

SPECIFICATIONS						ORDERING NUMBER														
						235	x	x	x	x	x	x	x	x	x	x	/xxxxxx	/xx		
Converter (connection for converter: single, double, three or four-wire, pursuant to the converter)	Converter type		Galvanic separation	Ex	NFC	Range [°C]														
	Analogue	INPAL 420					-50 to 50											/07		
							-30 to 70											/55		
							0 to 50												/15	
							0 to 100												/18	
							0 to 150													/19
							0 to 200													/20
							0 to 250													/21
					0 to 400						1							/23		
	Programmable	TH 100																/TH100		
		TH 100-ex		•														/TH100X		
		TH 200	•															/TH200		
		TH 200-ex	•	•														/TH200X		
		IPAQ-H	•															/IPAQH		
		IPAQ-HX *)	•	•														/IPAQHx		
		MINIPAQ-HLP																/MINIPAQ		
		APAQ C130			•													/C130		
		IPAQ C202																/C202		
		IPAQ C202X			•													/C202X		
	HART protocol	IPAQ C330	•															/C330		
		IPAQ C330X	•	•														/C330X		
		IPAQ C520	•															/C520		
		IPAQ C520S *****)	•															/C520S		
		IPAQ C520X	•	•														/C520X		
		IPAQ C520XS *****)	•	•														/C520XS		
		IPAQ C530	•		•													/C530		
		IPAQ C530X	•	•	•													/C530X		
		TH 300	•															/TH300		
		TH 300-ex	•	•														/TH300X		
		248 HA NA	•															/248HANA		
		248 HA I1	•	•														/248HA1X		
	644 HA NA	•															/644HANA			
644 HA I1	•	•														/644HA1X				
Other *)																	/99			
Without converter (for installation of the converter by the customer)																	/00			
LED display to loop 4-20 mA (not possible with head from corrosion resistant steel) (only with converter INPAL 420, TH 100, MINIPAQ-HLP)						LPI-02											/LD			
Special design for negative temperatures -196°C *)																	/CT			
Special design for extreme negative temperatures -269°C *)																	/ECT			

Standard design

- *) only as a special requirement after an agreement with the manufacturer
- **) In case of adapter length below 125 mm (minimum 65 mm), the temperature range is decreased to -70 to 250 °C.
- **) In case of spiral adapter length below 135 mm (minimum 75 mm), the temperature range is decreased to -70 to 250 °C.
- ***) The value in brackets applies to the spring adapter
- ****) The measuring inserts lengths for the spring adapter are not shown
- *****) Functional safety SIL2

TABLE 2 – ADDITIONAL REQUIREMENT FOR DESIGN OF TEMPERATURE SENSORS EX D (EX T) TO THERMOWELL, TYPE 235

SPECIFICATIONS				CODE	
PROOF OF METROLOGICAL COMPLIANCE	DESIGN OF TEMPERATURE SENSORS	MEASURING RANGE [°C]	USE		
Proof of metrological compliance pursuant to Directive No. 2014/32/EU (MID), Annex MI-004 *)	couple sensors without converter in connection 1xPt100/..I4 min. length of measuring insert Ø 6 mm = 210 mm min. immersion = 160 mm	0 to 180	application for residential and business premises and for the light industry	/M5	
CALIBRATION (for sensors as described below)	DESIGN OF TEMPERATURE SENSORS	MEASURING RANGE [°C]	USE		
Calibration by TPM 3342-94, in three calibration points evenly distributed in the sensor measuring range for use as part of the customer's measurement assemblies pursuant to Directive No. 2014/32/EU (MID), Annex MI-002 and MI-005 *)	sensors without converter in connection 1xPt100/..I4 min. length of measuring insert for temperature to 250°C Ø 6 mm = 210 mm for temperature over 250°C Ø 6 mm = 275 mm	-50 to 50	application for residential and business premises and for the light industry	/M1	
		-50 to 100		/M2	
		0 to 200		/M3	
		0 to 250 for sensors with extension lengths shorter than 125 mm (min. 65 mm)		/M4	
		0 to 300 for sensor with measuring resistance in tolerance class A			
0 to 400 for sensors with extension lengths 125 mm and longer, with measuring resistance in tolerance class B					
CALIBRATION	NUMBER OF CALIBRATION POINTS	CALIBRATION RANGE			
Calibration by TPM 3342-94, define calibration points	3	0 to 420 °C	/Q1		
	3	0 to 600 °C	/Q2		
	3	-196 to 100 °C	/Q3		
	3	-50 to 600 °C	/Q22		
	Other	-50 to 600 °C	/Q9		
REQUIREMENT FOR OTHER DOCUMENTATION		USE			
Copy of EU-Type Examination Certificate (pursuant to Directive No. 2014/32/EU)		M5		/MID	
Copy of Evaluation certificate No. ZR 141/10-0068		M1, M2, M3, and M4		/EC	
EU Declaration of Conformity		for design with converter		/EU	
Copy of EU-Type Examination Certificate acc to the 2014/34/EU		for fixed closure and a dust-tight closure		/Exd	
Copy of EU-Type Examination Certificate acc to the 2014/34/EU		for Ex ia design		/Exi	
Declaration of Conformity with purchase order 2.1 pursuant to EN 10204				/2.1	

Specify the code behind ordering number. Define calibration points for codes Q1, Q2, Q3, Q22 and Q9.



WARNING *) This request can only be selected with measuring insert Ø6 ± 0,1.
****)** This request cannot be selected for design with spiral adapter

TABLE 3 – OVERVIEW OF DESIGNS AND ORDERING OF WELDING THERMOWELLS PURSUANT TO DIN, SHAPE 4 (4F)

SPECIFICATIONS						ORDERING NUMBER							
						991	DIN	x	x	x	x	x	x
Cone welding thermowell	Shape 4	pursuant to DIN 43772	Without flange	PN 250			4	0					
	Shape 4F		With flange **)				4	F					
	Internal bore [mm]			ø 7					7				
	Internal thread / internal Ø thermowell [mm]			1/2 - 14 NPT / Ø 26						5			
	Nominal length of thermowell L [mm]	110	L1 [mm]	65	L2 [mm]	105							1
		140		65		135					2		
		170		133		165					3		
		200		65		195					4		
		200		125		195					5		
		260		125		255					6		
		410		275		405					7		
		Other (max. 1200) *)									9		
	Material of thermowell II	1.7335 ***)	Maximum operation temperature [°C]		550								1
		1.7380 ***)		580						2			
		1.4541 ****)		580						3			
		1.4571 ****)		400						4			
		1.5415 *) ***)		530						5			
		1.4903 *) ****)		620						6			
		A105, C22.8 or 1.0460 (P250GH) *) ***)		425						7			
		1.4404 *) ****)		550						8			
Other *)							9						

*) Upon a special request after an agreement with the manufacturer
 **) Flange design (shape, PN, DN and material) pursuant to the requirement of the customer
 ***) Thermowells of these materials cannot be used for zone 0
 Surface treatment of thermowells: preservation with grease - oil
 ****) For zone 0, thermowell from corrosion resistant steel shall be used (pursuant to (pursuant to EN 60079-26)
 ****) thermowells of these materials are suitable for contact with food

TABLE 4 – ACCESSORIES - OVERVIEW OF DESIGNS RECOMMENDED SCREW-IN THERMOWELLS SHAPE 7 PURSUANT TO DIN 43772, TYPE 991 (order separately)

SPECIFICATION					ORDERING NUMBER										
					991	DIN	K	x	x	x	x	x			
Cone screw-in thermowell	Shape 7 pursuant to DIN 43772		PN 250				K								
	Internal bore [mm]		Ø 7					7							
	External fixing thread		½ - 14 NPT						5						
			¾ - 14 NPT						7						
			1 - 11,5 NPT							8					
			other *)								9				
	Internal thread for sensor		M18 x 1.5							2					
			½ - 14 NPT								5				
			other *)									9			
	Nominal length of thermowell L [mm]	110		L1 [mm]	105								1		
		140			135									2	
		170			165									3	
		200			195									4	
		260 *)			255									6	
		410 *)			405									7	
		Other (maximum 1200) *)												9	
	Material of thermowell	1.7335 *) **)		maximum operation temperature [°C]		550								1	
		1.7380 *) **)				580									2
		1.4541 ****)				580									3
1.4571 ****)		400											4		
1.5415 *) **)		530											5		
1.4903 *) ***)		620											6		
A105, C22.8 or 1.0460 (P250GH) *) **)		425											7		
1.4404 *) ****)		550											8		
Other *) ***)														9	

*) upon a special requirement after an agreement with the manufacturer
 **) Thermowells of these materials cannot be used for zone 0
 ***) surface treatment of thermowells: preservation with grease – oil
 ****) For zone 0, thermowell from corrosion resistant steel shall be used (pursuant to (pursuant to EN 60079-26)
 **) thermowells of these materials are suitable for contact with food

TABLE 5 – ACCESSORIES - OVERVIEW OF DESIGNS RECOMMENDED NIPPLES FOR WELDING THERMOWELLS, TYPE 991 (order separately)

SPECIFICATION					ORDERING NUMBER							
					991	xxx	x	xxx	xx			
Nipple pursuant to DIN 43772 for welding thermowell shape 4 pursuant to DIN 43772	Direct nipple						NVD	4				
	Internal bore [mm]		Ø 26						D26			
	Material		15 128.5 / 14MoV6-3 **)		550						51	
			1.4541		550							72
			1.5415 *) **)		530							50
			1.4903 *)		620							71
			A105, C22.8 or 1.0460 (P250GH) *) **)		425							20
			1.4404 *)		550							73
			Other *)									

*) upon a special requirement after an agreement with the manufacturer
 **) surface treatment of thermowells: preservation with grease – oil

TABLE 6 – ACCESSORIES - OVERVIEW OF DESIGNS RECOMMENDED NIPPLES FOR SCREW-IN THERMOWELLS, TYPE 991 (order separately)

SPECIFICATION					ORDERING NUMBER						
					991	xxx	x	xxx	xx		
Nipple for screw-in thermowells pursuant to DIN 43772 shape 6 a 7	Direct nipple						NVP				
	Oblique (chamfer 45°)						NVS				
	Internal thread		¾ - 14 NPT		PN	160			4	N34	
	Other *)									999	
	Material		1.0308 or 1.0122 **)		300 (only PN 40)					N34	13
			15 128.5 / 14MoV6-3 **)		550					G34	51
			1.4541		550						
			Other *)		pursuant to material						99

*) upon a special requirement after an agreement with the manufacturer
 **) surface treatment of thermowells: preservation with grease – oil

TABLE 7 - OVERVIEW OF DESIGNS AND ORDERING OF CABLE GLANDS Ex d (Ex t) BRASS – TYPE 991

SPECIFICATION						Ordering number					
						991	xx	xxx			
Gland Ex d (Ex t) brass		Cable clamp (clamping module)				Thread	Torque of gland body	For cable Ø [mm]			
Size	Wrench		Size	Dimension							
	A	B		C	Ds						
No. 4	OK 17		No. 4	5	20	M20x1.5	30 - 35 Nm	4,5-8.5		VM	458
No. 5	OK 19		No. 5	5	22						
No. 6	OK 24		No. 6	6	27.5						
No. 4	OK 17		No. 4	5	20	1/2-14 NPT	25 - 30 Nm	4,5-8.5		VK	458
No. 5	OK 19		No. 5	5	22						
No. 6	OK 24		No. 6	6	27.5						

INSTALLATION AND CONNECTION

SENSOR INSTALLATION

Install the sensors by screwing into the relevant thermowell screwed into the nipple on the piping (technological equipment) or welded into the piping wall. During the installation, torque of 40 Nm is recommended.

With respect to maintaining metrological properties and the longest possible service life, it is not recommended to install the sensors in places with high turbulence of the medium, which is caused e.g. by a rapid transition from a small diameter of the piping to a larger one (when failing to comply with the required shape and dimensions of diffuser behind the flow meter), etc. Recommended distance of the temperature sensor from the installation flange of the flow meter is min. 1 m.



WARNING


The temperature sensor may be installed to the thermowell located in the zone 1 (1) or zone 2 (22).

Distance of the fixed closure EX d IIC from close structures or between the suspensions shall be at least 40 mm.

The temperature sensor with a paint finish must be installed in an explosive atmosphere with dust so as to avoid the occurrence of creep discharges



EXAMPLES OF INSTALLATION OF THERMOWELLS DIN

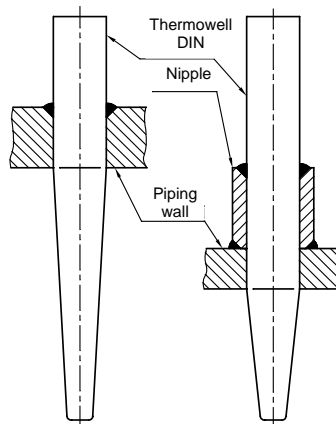

INSTALLATION OF CABLE GLAND

To secure the fixed closure (dust-tight closure), only the certified cable gland Ex d IIC (Ex tb IIIC) with coverage IP 68 shall be used (see accessories 991 or another similar gland). For temperature sensors with converter, a barrier cable gland must be used in zone 1 of the IIC gas gauge, or an Ex ia converter. The gland shall be tightened in the sensor head in the prescribed way.

Torque of gland body:

- | | | |
|----|-----------------------------------|-----------|
| a) | for gland with thread 1/2 - 14NPT | 25 – 30Nm |
| b) | for gland with thread M20x1.5 | 30 – 35Nm |

Installation of the cable in the gland, its sealing and securing against pull-out shall be realized pursuant to the instruction sheet of the gland supplier.



WARNING

Do not use other sealing rings in the gland than the original ones delivered by the manufacturer. Do not change artificially the outer diameter of the cable e.g. by winding it around with electrical insulating tapes.

ELECTRICAL CONNECTION

The sensor installation in conditions with explosive gaseous atmosphere or flammable dust shall comply with the requirements of EN 60079-14.

The terminal board of the sensor (converter) is accessible after the removal of the lid of the head.

Connect the evaluation devices to the sensor with a non-armoured cable with double insulation (internal wires with Cu core with cross-section 0.5 to 1.5 mm²).

Seal the cable in the gland by prescribed tightening of the closing nut pursuant to instruction sheet of the gland. Then secure it with clamp against pull-out.



WARNING

Do not use independent wires without jacket for electrical connection. The cable must be circular and compact, the filler or shell must be extruded and the filler material, if



used, must be non-absorbent. The length of the connecting cable must be at least min. 3 m. Temperature resistance of the cable shall comply with the ambient temperature!

The cable insulation shall have chemical and mechanical resistances in compliance with the conditions, in which the cable will be installed. It is recommended supporting the cable along its length between the sensor and the follow-up device. In the environment with interfering signals, use shielded cable in the power supply circuit. Shielding may be only grounded (earthed) in one point. The cable should not be placed together with power cables.

In case of the sensor with HART protocol converter, the maximum length of wiring is defined by the arrangement of wires of the connecting cable. The total length of wiring may be up to 1500 m. It requires a twisted two-wire with shared shielding with the diameter of the cross section min. 0.5 mm². Recommended HART communicator, model 275, is connected to the supply loop of the sensor with converter pursuant to figure 2. To achieve reliable communication, resistor 250 Ω shall be introduced in the circuit of the output loop.



WARNING

Programmable converter may not be connected to a computer or a HART communicator if the converter is located in explosive environment.



The surface temperature of the converter must not exceed the maximum surface temperature for a given temperature class.

For the installations in dangerous areas, mutual connection is required (bringing to the same potential). To achieve it, clamps on the sensor head can be used.

The sensor need not be connected to the system of mutual connection independently if it is installed firmly and has metal interconnection with the structural parts of piping, which is connected to the system of mutual connection.


Maximum cross-section of wire for connection to external and internal clamps:

Internal terminal: stranded wire 1.5 mm², full wire 2.5 mm²

External terminal: stranded wire 4.0 mm², full wire 6.0 mm²

If stranded wires are used for the interconnection, they shall be protected against fraying with pressing hollow.

HEAD OF THE SENSOR WITH TERMINALS

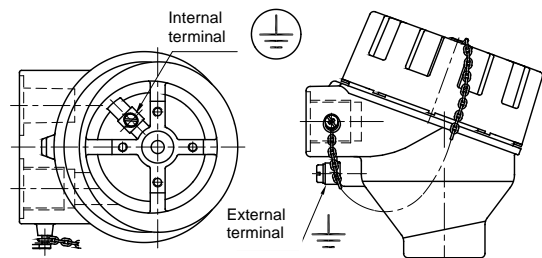

CLOSING HEAD OF FIXED CLOSURE Ex d

After electrical connection of the sensor, the lid of the head shall be fully tightened by hand, then released slightly to ensure matching with the closest groove against the securing pit and fixed by this screw against releasing. If the lid of the sensor is not tightened and secured by the above mentioned screw, the sensor does not comply with the requirements of fixed closure Ex d.



WARNING:

Electric supply of the sensor may not be connected before closing the fixed closure!



SENSOR INSTALLATION WITHOUT CONVERTER AND SENSOR WITH CONVERTER Ex ia TO ZONE 0 (20)



WARNING:

The user is responsible for ensuring that during operation in zone 0 is between the sensor head from an aluminium alloy and other equipment preclude any risk of ignition due to impact and friction.



The sensor without converter can be used, in case of the installation pursuant to EN 60079-11, Art. 5.7 in the intrinsically safe circuit Ex ia according to EN 60079-25), as a simple equipment. For simple equipment, the maximum temperature

can be determined from the value of the P0 of the follower and the temperature class is determined.

Sensor with converter Ex ia can be used while adhering to the Ex ia parameters of the converter shall be complied with pursuant to the enclosed converter manual.

In intrinsically safe circuits, only insulated cables that are capable of withstanding an electrical strength test with a voltage equal to twice the voltage in the intrinsically safe circuit or 500 V eff (DC 750 V) must be used, with a larger value being taken.

When installing intrinsically safe circuits, including cables, do not exceed the maximum allowable inductance, capacity or ratio LiR and surface temperature. Permissible values are determined from the documentation of the connecting device or label. Place follow-up equipment out of the danger area. An intrinsically safe source approved for supplying intrinsically safe devices in accordance with EN 60079-11 must always be used.

The shield of the intrinsically safe circuit cable must be grounded in the same place as the intrinsically safe circuit, the connection must be outside the dangerous area.

If the intrinsically safe circuit is isolated from the ground, the shield must be connected in one place to the protective interconnection system. This can be using the terminals on the sensor head.

COMMISSIONING

After the sensor installation, including the fixed closure, and connection of the follow-up (evaluation) device to the supply voltage (and the settlement period of the converter), the equipment is prepared for operation.



WARNING

After installation must be require initial inspection equipment and installations according to EN 60079-17



OPERATION AND MAINTENANCE

The sensor does not require any operation; maintenance and follow-up regular periodic revision or permanent supervision of expert staff are performed pursuant to EN 60079-17



WARNING

Any intervention into the sensor and its structure will result in a change of properties and can result in an explosion!



SENSOR UNINSTALLATION



WARNING

Warning: Temperature sensor is in design Ex and must be disconnected from the power supply source before opening the lid of the head and releasing the cable gland in the explosive environment!



Then release the securing screw of the lid by ALLEN key 1.5 mm (a part of accessories). The terminal board of the sensor (converter) is accessible after unscrewing the lid of the head. Measuring insert of the sensor can be replaced and is uninstalled from the head after disconnecting the cable by releasing two screws.

Before a complete uninstallation of the sensor, the wire for mutual interconnection shall be released from the external clamp on the sensor.

Disconnect the connecting cable from the terminal board, then release it from the clamp on the gland and from closing nut of the gland. Unscrew the sensor from the thermowell; torque for releasing is approx. 40 Nm. While releasing the screw-joint of the sensor, the thermowell may never be released.

SPARE PARTS

Spare parts shall be delivered by the manufacturer.

Relevant measuring inserts can be ordered pursuant to the following table (the table applies only to the version without a spring adapter):

SPECIFICATION		ORDERING NUMBER					
		MV230	/xxx/	1	x	x	/xxxx
Length of measuring insert [mm]			pursuant to tab. 1	1			
Ø measuring insert [mm]	6 ± 0,1			1			
	3 ± 0,1			3			
Sensing probe	Pt100				1		
	Pt500				2		
Tolerance class	A					A	
	B					B	
Connection of terminal board or converter	Pt100/ /4						/J4
	2xPt100/B/2					B	/D2
	2xPt100/ /3						/D3
	Pt/ /4 *)			1	1		/J4X
	2xPt/B/2 *)			1	1	B	/D2X
	2xPt/ /3 *)			1	1		/D3X
Converter pursuant to tab. 1							/converter

*) Ex ia design

PURCHASE ORDER EXAMPLE OF MEASURING INSERT

Resistor measuring insert without converter
230 /375/ 11B/J4
6 pcs

To order the certified measuring inserts, specify the code according to Table 2 – Additional requirements – behind the ordering number.

The measuring inserts are marked according to Article DESIGNATION. Designation is completed with the ordering number.

Each delivery includes

- Delivery note
- Measuring insert pursuant to the purchase order
- Optional accessories to the measuring insert with a programmable converter
 - o Configuration program according to the required converter
 - o Communication modem (for serial port RS 232C) according to the required converter
- Accompanying technical documentation in Czech
 - o Product manual
 - o Product quality and completeness certificate, which also serves as the warranty certificate
 - o EU Declaration of Conformity

If it is established in the purchase contract or agreed otherwise, the following documentation can be also delivered with the product

- Calibration sheet (for calibrated design)
- Declaration of Conformity of the supplier according to EN ISO/IEC 17050-1
- Copy of EU-Type Examination Certificate pursuant to the Directive No 2014/34/EU (ATEX). for Ex ia design

WARRANTY

The warranty period is 24 months from the receiving of the product by the customer, unless established otherwise in the contract. Rejection of defects shall be enforced in writing at the manufacturer within the warranty period. The rejecting side shall identify the product name, ordering and manufacturing numbers, date of issue and number of the delivery note, clear description of the occurring defect and the subject of the claim. If the rejecting side is invited to send the device for repair, it shall do so in the original package of the manufacturer and/or in another package ensuring safe transport.

The warranty shall not apply to defects caused by unauthorized intervention into the device, its forced mechanical damage or failure to comply with operation conditions of the product and the product manual.

DISABLING AND LIQUIDATION

The product and its package do not include any parts that could impact the environment.

Products that are withdrawn from operation, including their packages (with the exception of products marked as electrical equipment for the purposes of return withdrawal and separate salvage of electrical waste), may be disposed of to sorted or unsorted waste pursuant to the type of waste.

The manufacturer realizes free return withdrawal of marked electrical equipment (from 13.8.2005) from the consumer and points out the danger connected with their illegal disposal. The package of the sensor can be recycled completely. Metal parts of the products are recycled, non-recyclable plastic materials and electrical waste shall be disposed of in accordance with applicable legislation.


REPAIRS

The sensors shall be repaired by the manufacturer. They shall be sent for repair in the original or equal package without accessories.


FIGURE 1 – SCHEME OF CONNECTION OF TEMPERATURE SENSORS

SCHEME OF CONNECTION WITHOUT CONVERTER


J4 - With simple measuring resistor in four-wire connection (Pt 100/ /4)

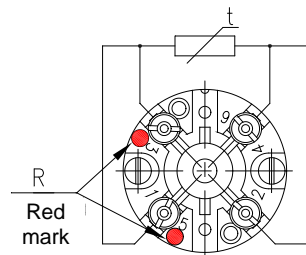

D2 - With double measuring resistor in two-wire connection (2 × Pt 100/B/2)

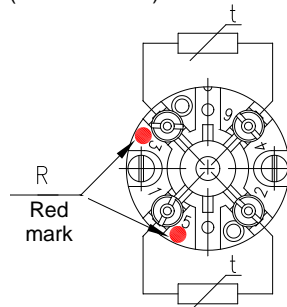


D3 - With double measuring resistor in three-wire connection (2 × Pt 100/ /3)

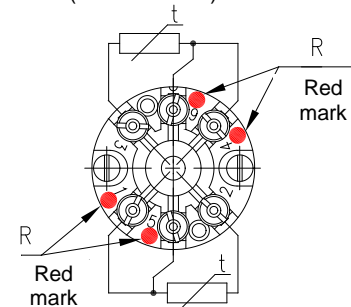


SCHEME OF CONNECTION WITH CONVERTER AND DISPLAY


with converter

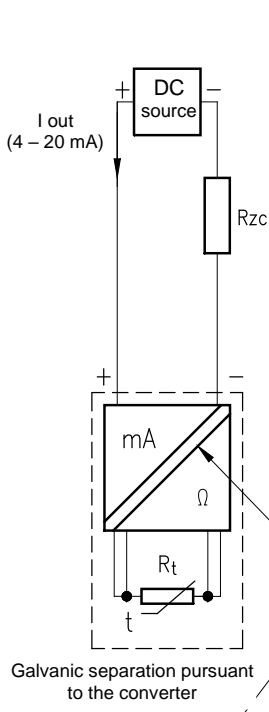

with converter with HART protocol

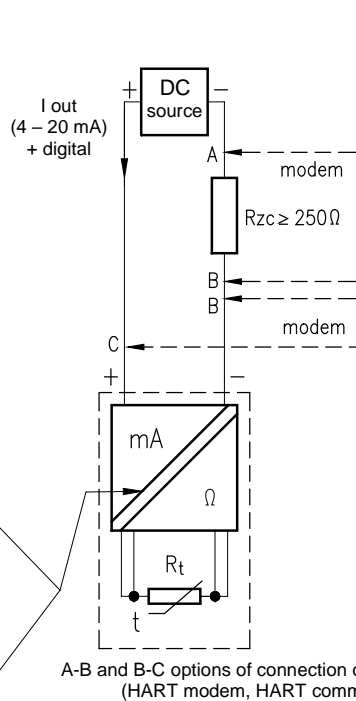

with converter Ex ia

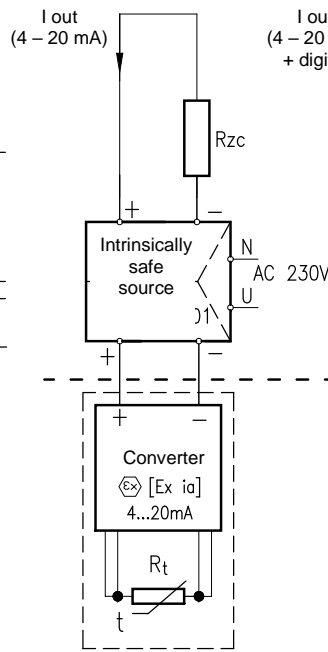

with converter Ex ia with HART protocol

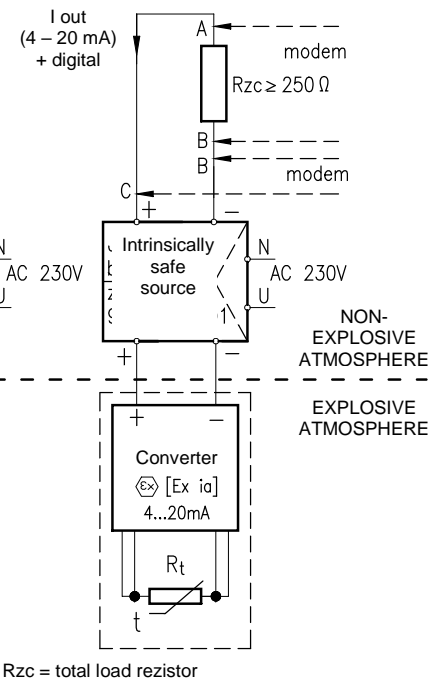


FIGURE 2- EXAMPLE OF OPERATION CONNECTION OF TEMPERATURE SENSOR WITH CONVERTER IN LOOP 4 - 20 mA

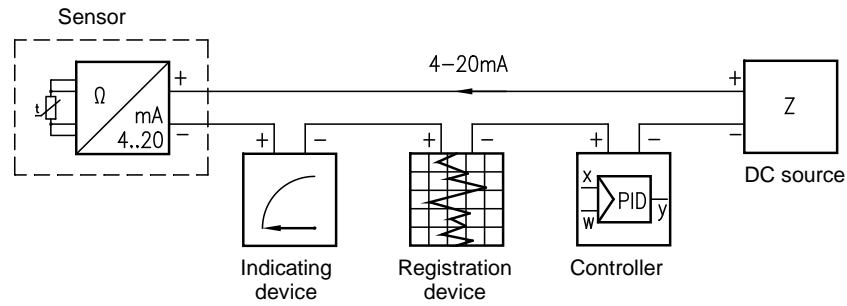


FIGURE 3 – MARK OF NON-EXPLOSIVENESS

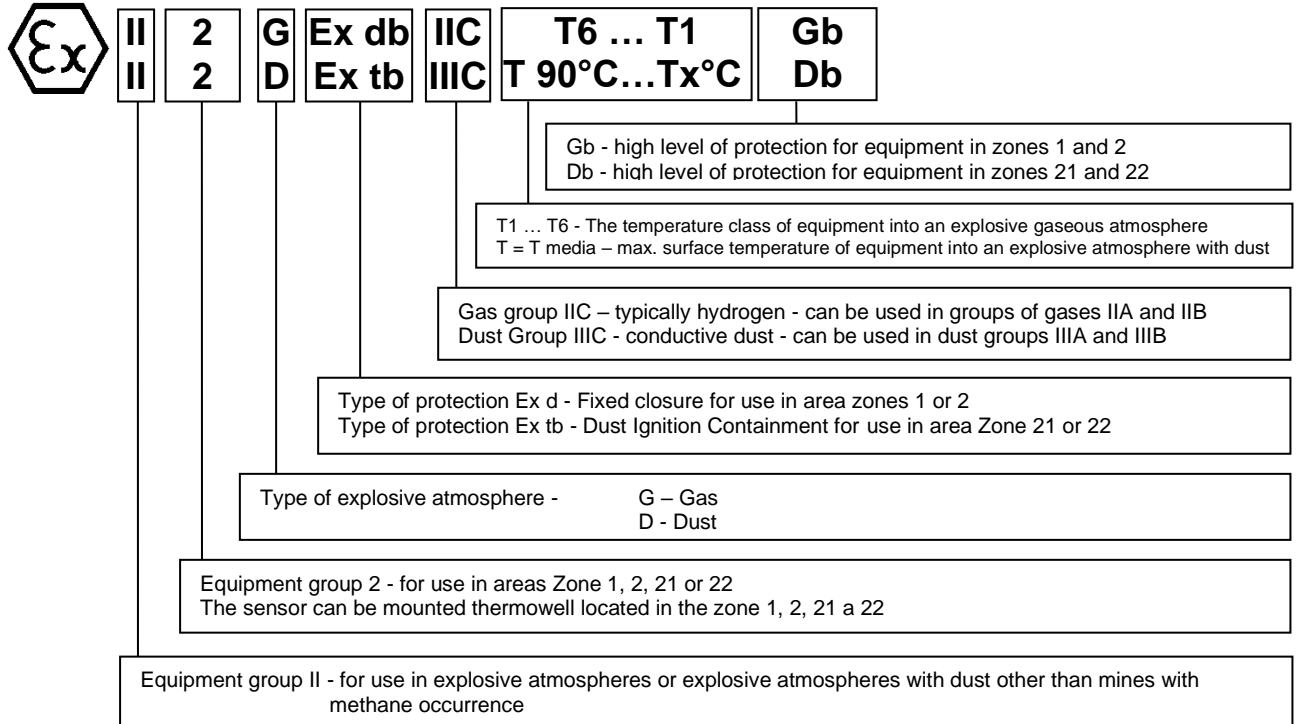


FIGURE 4 - INTRINSICALLY SAFE MARKING

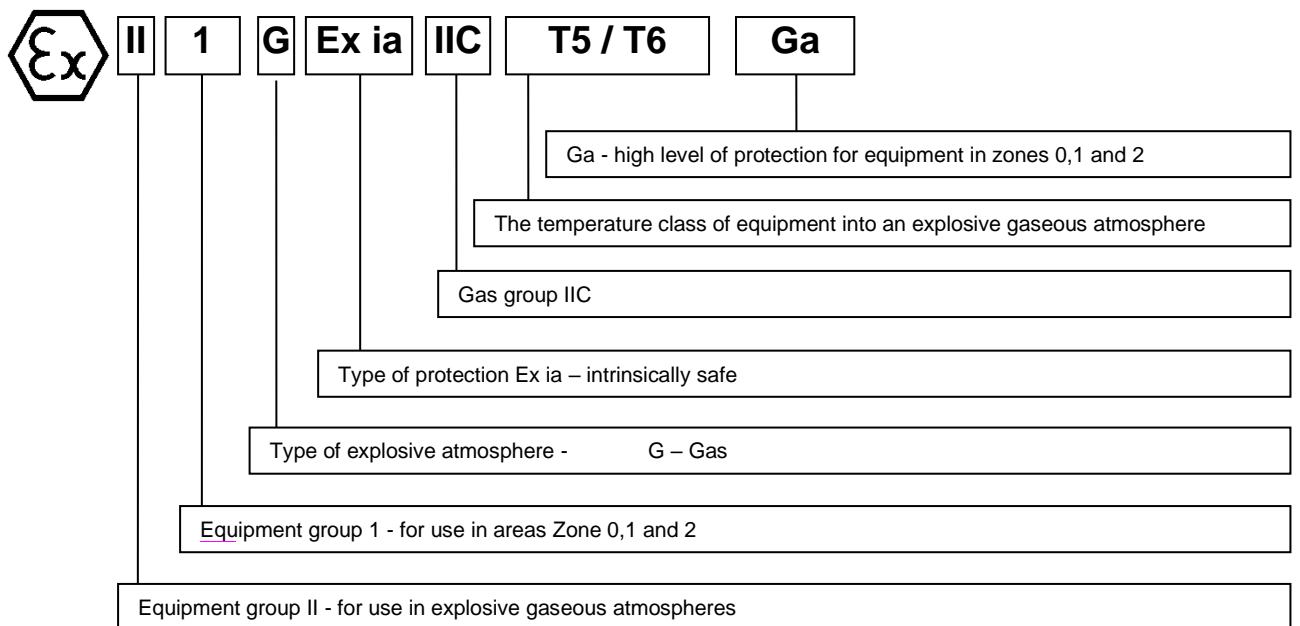


FIGURE 5 – THERMOWELL FOR SENSOR TEMPERATURE Ex d FOR ZONE 0 (pursuant to EN 60079-26)

Thermowell that is used in the function of a partition wall between the zones 1 or 2 and zone 0 shall be made of a corrosion resistant metal and with wall thickness $t \geq 1$ mm


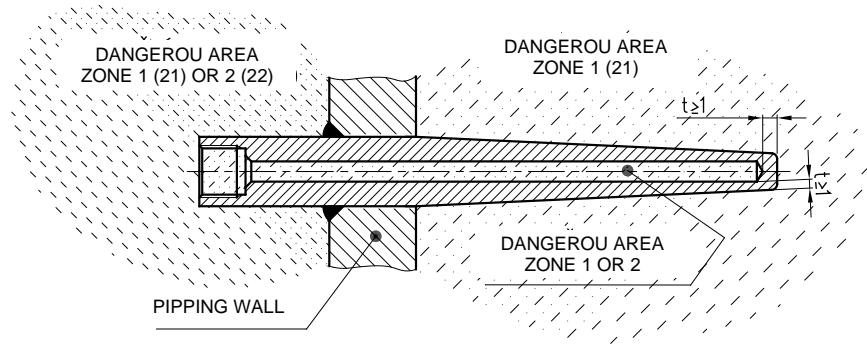


FIGURE 6 – EXAMPLE OF INSTALLATION OF TEMPERATURE SENSORS Ex d TO THERMOWELL DIN

(in case a higher limit of the measurement range is required on a level exceeding the required temperature class)

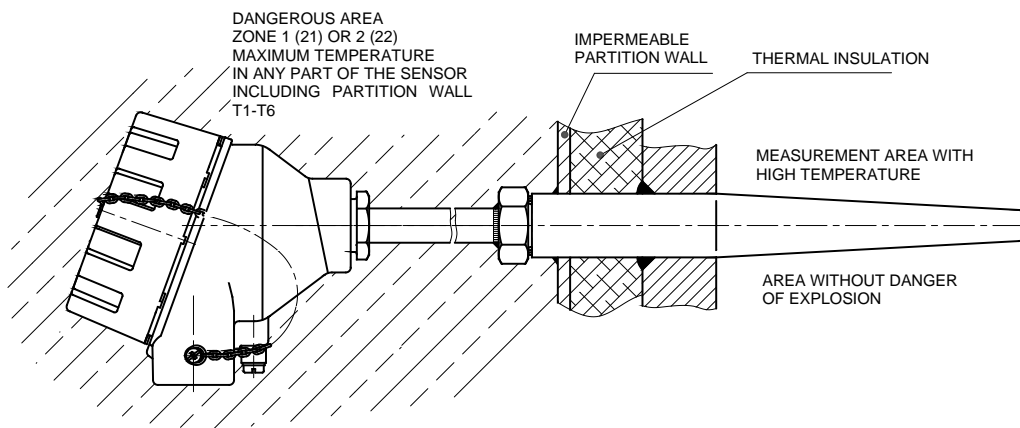

May 2024

© ZPA Nová Paka, a.s.

