



Resistance temperature sensor Ex d (Ex t, Ex i) with thermowell ČSN without converter or with converter type series 240 type 244

PRODUCT MANUAL

FOR DESIGNS WITH CONVERTER A MANUAL IS ENCLOSED TO THE RELEVANT CONVERTER
FOR DESIGN WITH CONVERTER AND DISPLAY A MANUAL IS ENCLOSED TO THE RELEVANT CONVERTER AND DISPLAY

APPLICATION

- For exact remote measurement of temperature of steady and running liquids (gases and fluids), for which the properties of the thermowell of the sensor are suitable; measurement may be realized to the temperature max. 600°C and nominal pressure PN 160
- For environment with explosive gaseous atmosphere according to EN 60079-10-1 and explosive atmospheres with combustible dust according to EN 60079-10-2
 - o Thermowell of the sensor may be installed in Zone 0(20), Zone 1(21) or Zone 2(22)
 - o Other parts of the sensor (screw union, adapter, connecting head) may be located in Zone 1(21) or Zone 2(22)
 - o In case of application of the converter Ex ia or connection to Ex ia circuit according to EN 60079-25, the sensor may be used in Zone 0 (20), 1 (21) and 2 (22)
- In a set with control or diagnostic systems for process monitoring
- In design with converter for transfer of resistance sensor signal to unified output signal 4 to 20 mA or digital signal (converter with HART protocol)
- In design with display to display the value of the measured value
- For the environment, where mechanical resistance is required pursuant to EN 60068-2-6 (class AH2) and seismic capability of the electrical equipment of the safety system of the nuclear power stations pursuant to EN IEC/IEEE 60980-344 (SSE/S2)
- special design for cryogenic environment with medium temperature up to -269 °C

The sensors with converter are rated products pursuant to the Directive 2014/34/EU, 2014/30/EU of the European Parliament and the Council and EU Declaration of Conformity **EU -244000** is issued for them.

For use temperature sensors as separate assemblies of the heat meter on placing on the market.


The sensors are rated products pursuant to the Directive 2014/32 EU of the European Parliament and the Council and EU Declaration of Conformity **EU-MID-244000-EN** is issued for them.

Using sensors within the meaning of Directive 2014/32 EU of the European Parliament and the Council. (MID) as part of the customer's measurement kits, for which the conformity of the assemblies as a whole must be assessed when placed on the market with all the features required by this directive:

- sensor without transmitter in 1xPt100 /.../ 4 connection can be used by the customer on the basis of an evaluation certificate in its measuring sets in the sense of Directive 2014/32 EU of the European Parliament and the Council

DESCRIPTION

The sensor consists of a replaceable measuring insert with flange and ceramic terminal board or installed two-wire converter (insulated or non-insulated, even in design Ex i) and protective armature consisting of a head and a thermowell with an adapter and connecting screw union. The head with the measuring insert and gland form the fixed closure Ex d. It is provided with a lid, which can be screwed, and a cable gland for the connecting wiring. The cable gland (pursuant to the required dimension of the cable) forms optional accessories to the sensor. The terminal board (of the converter) of the sensor is accessible after unscrewing the lid of the head, which is fixed, after being tightened, with a pin against spontaneous releasing. The sensor is provided with an external clamp and an internal clamp on the head for the connection of the grounding wire or wire for mutual interconnection.

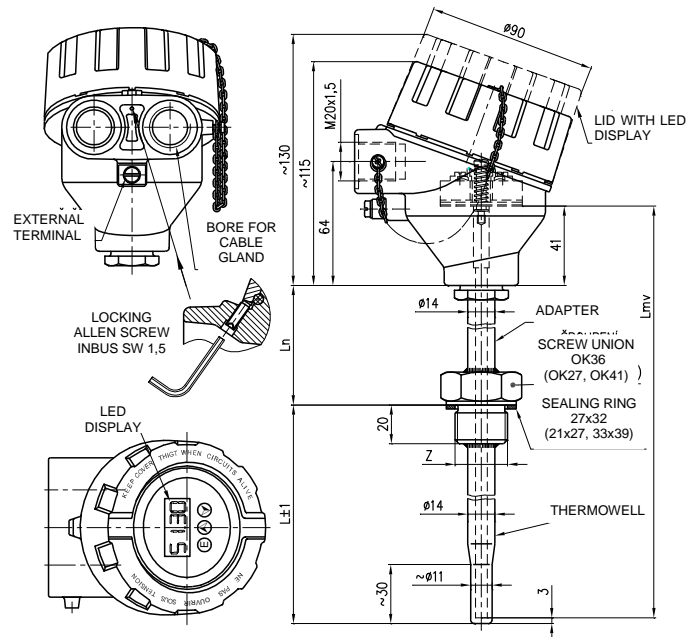

<i>L</i>	Nominal length
<i>L_n</i>	Length of adapter
<i>L_{mv}</i>	Length of measuring insert
<i>Z</i>	Connecting thread of the sensor adapter
	<i>G</i> ½, M20x1.5 OK27
	<i>G</i> ¾, M27x2, 3/4-14NPT OK36
	<i>G</i> 1 OK41

The sensor with converter is supplied from an external source. The installed converter is pre-set to the required range at the sensor manufacturer.

To measure temperature, a defined change of sensor resistance in dependence on the change of temperature of the measured environment is used.

TECHNICAL DATA

The sensor dimensions are based on the original ČSN 25 8301. The sensor is designed pursuant to EN 61140 as an electric equipment of protection class III for the application in networks with category of overvoltage in installation II and pollution grade 2 pursuant to EN 61010-1; the follow-up (evaluation) device shall comply with Article 6.3 of the said standard.

Measuring range:

Sensor with standard adapter	
<i>L_n</i> = 135 mm	-70 to 600 °C *) **) ***)
	-269 to 100 °C **) ***)
Sensor with shortened adapter	
<i>L_n</i> min = 65 mm	-70 to 250 °C *) **) ***)
	-269 to 100 °C **) ***)

*) The upper limit of the range of measurement is limited by resistance of the material of the applied thermowell.

If it is ensured with a suitable way of installation that the surface temperature of the part of the sensor located in dangerous area does not exceed the temperature of the required temperature class (T1...T6), the upper limit of the range of measurement may be even higher (max. 600°C). For an example of installation, refer to figure 6

**) Class A is only guaranteed in the range from -70 to 300 °C

***) Special design for cryogenic environments

The measuring range of the sensor with converter is established by the range of the selected converter.

Design for explosive atmospheres:

Fixed closure pursuant to EN 60079-0 and EN 60079-1,

II 1/2 G Ex db IIC T6...T1 Ga/Gb

(Meaning of designation - see figure 4)

Dust-tight closure pursuant to EN 60079-0 ed. 4 and EN 60079-31:

II 1/2 D Ex ta/tb IIC T=T media Da/Db

(Meaning of designation - see figure 4)

Intrinsically safe pursuant to EN IEC 60079-0 and EN 60079-11:

I 1 G Ex ia IIC T5/T6 Ga

(Meaning of designation - see figure 5)

P_i = 192 mW T6 (-60°C ≤ Ta ≤ 60°C)

P_i = 290 mW T6 (-60°C ≤ Ta ≤ 55°C)

T5 (-60°C ≤ Ta ≤ 65°C)

Intrinsically safe circuit parameters:

only for Pt 100, with measuring insert Ø6

Input

U_i = 60 V

I_i = 100 mA

P_i = 192 mW / 290 mW

C_i = 780 pF/m

Li = 0,6 µH/m



WARNING



The device must be installed in a housing that meets the degree of protection against intrusion of at least IP 20. The casing of the measuring insert is not separated from the inner intrinsically safe circuit according to the standard EN 60079-11. This information must be taken into account during installation.

Intrinsically safe version with converter:

according to built-in converter

Electric strength pursuant to EN 61010-1, Article 6.8.4:

500 V eff (only measuring insert without converter or design with insulated converter)

Electric insulation resistance pursuant to EN IEC 60751:

min. 100 MΩ, at 15 to 35°C, max. 80 % relative humidity, min 100 V DC

Power supply of converter:

DC 24 V from source SELV, e.g. INAP 16 and INAP 901

Other data of converter: refer to the enclosed manual

Display: LED display to loop 4-20mA

other date refer to enclosed manual

Ingress Protection pursuant to EN 60529:

IP 68, 1 m, 30 min

Operation position:

discretionary; the gland shall not be situated upwards

Type of operation: continuous

Sensor weight: with adapter 135 mm 1.05 kg

Applied materials:

Thermowell	steel 1.4541
Stem tube of measuring insert	steel 1.4541
Adapter	steel 1.4541
Head	aluminium alloy painted with blue epoxy colour steel 1.4401
Internal wiring	Cu
Head terminals of the terminal board	brass with Ni surface
Connecting elements of the sensor	stainless steel

OPERATION CONDITIONS

The environment is defined by the group of parameters and their severity grades IE 36 pursuant to EN 60721-3-3 and the following operation conditions.

Ambient temperature for head and gland of the sensor according to the type of heads used:

- -50°C ≤ Ta ≤ 75°C for the heads of Al Alloy (XD- AD;XD-ADH)
- -50°C ≤ Ta ≤ 70°C for stainless steel heads (XD-SD)
- -40°C ≤ Ta ≤ 75°C for heads (XD-I80C; XD-I80Cwin)
- for design with converter (and display) pursuant to the type of converter (and display) (refer to the enclosed converter and display manual)

Maximum surface temperature of the sensor:

it complies with maximum temperature of the measured medium

Maximum surface temperature for equipment operating in the environment with a threat of explosion of gases, steam and mist pursuant to EN 60079-0 ed. 2 and temperature class of the sensor are determined in dependency on the temperature of measured medium pursuant to the following table:

Temperature class	Maximum surface temperature	Maximum temperature of measured medium
T6	85°C	80°C
T5	100°C	95°C
T4	135°C	130°C
T3	200°C	195°C
T2	300°C	290°C
T1	450°C	440°C

For temperatures of the measured medium greater than the limit for temperature class T1, the maximum surface temperature Tx is determined from the maximum temperature of the measured Tm media and the safety addition of 10 ° C.
Tx = Tm+10 ° C.

Maximum permitted surface temperature for the equipment operating in the environment with a threat of explosion of dust pursuant to EN 60079-0:

- Temperature limitation due to occurrence of stirred dust:
 $T_{max} = 2/3 T_{cl}$
where T_{cl} is the temperature of ignition of stirred dust
- Temperature limitation due to occurrence of layers of dust to 5 mm thickness:
 $T_{max} = T_{5\text{ mm}} - 75\text{ °C}$
where T_{5 mm} is the temperature of ignition of dust layer 5 mm thick
- Dust layers over 5 mm – refer to EN 60079-14

Maximum permitted surface temperature is defined by the lower value of the values specified above.

Intrinsically safe measuring inserts can be used in intrinsically safe circuits of group II electrical equipment.



WARNING



The user shall guarantee that the maximum surface temperature of any part of the sensor does not exceed the temperatures of ignition of any gas, steam or dust, which can occur, due to external thermal effects.

Relative ambient humidity:

- 10 to 100 % with condensation, with upper limit of water content 29 g H2O/kg of dry air
- for converter version according to converter type (see enclosed converter instructions)
- for converter and display version according to converter and display type (see enclosed converter and display instructions)

Atmospheric pressure: 70 to 106 kPa

Vibrations:

Nominal length [mm]	100	160	250	400	630
Frequency range [Hz]	10 to 500				
Drift amplitude [mm]	0.2	0.2	0.15	0.15	0.15
Acceleration amplitude [ms ⁻²]	29.4	29.4	19.6	19.6	19.6

Maximum speed of flow of liquids:

Maximum speed of flow [m/s]	Nominal length [mm]				
	100	160	250	400	630
Water steam and air	50	25	8	2.5	1
Water	5	3	3	1.5	0.2

METROLOGICAL DATA

Sensing probe: Measuring resistor Pt 100 in connection pursuant to scheme and table of designs, α = 0.00385 [K⁻¹], tolerance class A or B pursuant to EN IEC 60751

Range of pair temperature differences pursuant to EN 1434: 3 to 180 K

Internal wiring resistance at 20 °C: 0.1 Ω/m

Calculated resistance value of internal wiring of the design without converter is specified on the label of the measuring insert.

Maximum current load of measuring resistor:

Pt 100 3 mA
Pt 500 1 mA

Recommended measuring current:

Pt 100	1 mA
Pt 500	0,5 mA

Output signal of the converter (linear with measured temperature):

4 to 20 mA (+ digital for HART protocol)

Calibration depth of immersion of the measuring insert of the sensor

for temperature points within range -70 to 250°C:

200 mm (min. 160 mm)

for temperature points above 250°C:

300 mm (min. 260 mm)

The distance of flange of the measuring insert from the level of medium in the calibration bath shall be at least 40 mm at temperatures to 250°C and min. 70 mm at temperatures above 250°C.

Temperature response time pursuant to EN IEC 60751 in

whirling water (characteristic value):	$\tau_{0,5}$	29 s
	$\tau_{0,9}$	95 s

DESIGNATION :**Data on label of head**

- Trademark of the manufacturer
- Made in Czech Republic
- Type of resistance sensor, nominal value R_0 / tolerance class / configuration of wires of internal wiring *)
- Measuring range or set-up converter range
- Product ordering number
- Ingress Protection
- Serial number
- Output signal 4 to 20 mA (design with converter)
- Ambient temperature
- Mark of non-explosiveness:
 - ⊕ II 1/2 G Ex db IIC T6...T1 Ga/Gb
 - ⊕ II 1/2 D Ex ta/tb IIIC T=T media Da/Db
 - ⊕ II 1 G Ex ia IIC T5/T6 Ga
 and number of EC Type Examination Certificate
- Designation of non-explosiveness and No. of EU Type Examination Certificate (for design with converter Ex ia)
- CE mark 1026
- Other data for design with proof of metrological compliance (/M5)
 - o the conformity marking (CE + supplementary metrology marking) and the number of the notified person
 - o EU type examination certificate number TCM 321/12 - 4906
 - o range of temperature difference
 - o serial number /1 a /2 for unambiguous resolution of sensors for inlet and return pipes
- Other data for design /M1, /M2, /M3 a /M4
- Evaluation certificate. No ZR 141/10-

*) Configuration of wires of internal wiring is not specified for the converter

Data on label of measuring insert

- Trade mark
- Sensor type, nominal value R_0 / tolerance class / Configuration of wires of internal wiring *)
- Serial number
- Resistance value of internal wiring (for design without converter)

*) Configuration of wires of internal wiring is not specified for the converter

Data on label of converter

- Trade mark
- Sensor type
- Pre-set temperature range
- Designation of non-explosiveness and number of the EU-Type Examination Certificate
- the conformity marking CE (for converter Ex ia with the number of the notified person)

Data on display

- Trade mark
- the conformity marking CE

DELIVERY

Unless agreed otherwise with the customer, each delivery includes

- Delivery note
- Sensor pursuant to the purchase order
- Sealing ring
 - o 21x27 TPD 62-014-91 for thread G½ and M20x1.5

- o Cu 27 x 32 x1.5 (ČSN 02 9310.2) for thread M27 x 2 and G¾
- o Cu 33 x 39 x 2 (ČSN 02 9310.2) for thread G1 (for thread 3/4-14NPT, the sealing ring is not delivered)
- Allen key 1.5 mm
- Suitable cable gland ordered separately pursuant to the catalogue of accessories, type 991. An instruction sheet is delivered with each cable gland
- Suitable nipples ordered separately pursuant to the catalogue of accessories, type 991
- Optional accessories to the sensor with programmable converter
 - o Configuration (parameterization) programme pursuant to the required converter
 - o Communication modem (for serial port RS 232C) pursuant to the required converter
- Accompanying technical documentation in Czech
 - o Product manual
 - o Product quality and completeness certificate, which also serves as the warranty certificate
 - o EU Declaration of Conformity
 - o EU Declaration of Conformity for Conformity with Metrological Compliance (/ M5)

If it is established in the purchase contract or agreed otherwise, the following documentation can be also delivered with the product

- Copy of the Inspection Certificate 3.1 for material of thermowell with the heat number
- Declaration of Conformity with purchase order 2.1 acc. to EN 10204
- Calibration sheet (for uncertified calibrated design)
- Copy of EU-Type Examination Certificate pursuant to the Directive No 2014/34/EU for fixed and dust-tight closure
- Copy of EU-Type Examination Certificate pursuant to the Directive No 2014/34/EU for Ex ia design
- Copy of Evaluation certificate for design /M1, /M2, /M3 and /M4
- Test report about the seismic and the vibration qualification

CERTIFICATION

- Non-explosiveness Ex ia, EU-Type Examination Certificate pursuant to the Directive 2014/34/EU. FTZÚ 08 ATEX 0200X as amended
- Non-explosiveness Ex ia, EU-Type Examination Certificate pursuant to the Directive 2014/34/EU FTZÚ 21 ATEX 0007X
- Non-explosiveness Ex ia, EU-Type Examination Certificate pursuant to the 2014/34/EU (pursuant to the type of the converter and display)
- Declaration of metrological conformity (MID) in accordance with Module B of Directive No. 2014/32/EU, EU Type Examination Certificate No. TCM 321/12-4906
- Evaluation certificate. No. ZR 114/10-0068

RELIABILITY

Reliability indicators in operation conditions and ambient conditions specified herein

- Mean time of operation between failures 96 000 hours (inf. value)
- Expected service life 10 years

CALIBRATION

It is realized pursuant to TPM 3342-94 and in compliance with EN IEC 60751, usually in three temperature points evenly distributed within the operation range of the sensor or in the points according to the requirement of the customer. Calibration sheets with measured data are issued for calibrated sensors.

ASSESSMENT OF CONFORMITY PURSUANT TO THE DIRECTIVE 2014/32 EU

Couple sensors are verified pursuant to EN 1434-5.

The sensors are rated products pursuant to the Directive 2014/32 EU of the European Parliament and the Council and EU Declaration of Conformity is issued for them.

The manufacturer performs subsequent verification under EN 1434-5. Subsequent verification is ordered in the department AMS ZPA N. Paka a.s. (ams@zpanp.cz).

For subsequent verification, send the whole couple tied together.


METHOD OF PLACING THE MARK OF ASSEMBLY AND SERVICE ORGANIZATION AND REINSURANCE MARKS

Verified sensors have a self-adhesive label with reinsurance mark. The label is stuck on the terminal board and the sensor head.

After installation on place of use the sensors will be reassured with mounting seal eventually with label, preventing unauthorized manipulation.

After subsequent verification, the sensors will be provided with a self-adhesive label with an official mark. The label will be stuck on the terminal board and the sensor head instead of the original reinsurance mark.

PLACING THE MARK OF ASSEMBLY AND SERVICE ORGANIZATION AND REINSURANCE MARKS

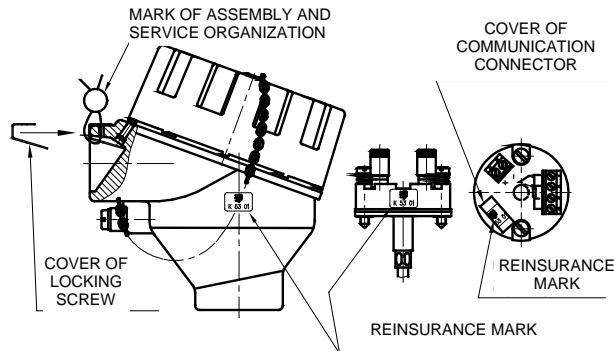

PACKING

Both sensors and accessories are delivered in a packing ensuring resistance to the impact of thermal effects and mechanical effects pursuant to controlled packing regulations.

TRANSPORT

The sensors may be transported on conditions corresponding to the set of combinations of classes IE 21 pursuant to EN IEC 60721-3-2 (i.e. by airplanes and trucks, in premises that are ventilated and protected against atmospheric effects).

STORAGE

The sensors may be stored on conditions corresponding to the set of combinations of classes IE 12 pursuant to EN IEC 60721-3-1, but with ambient temperature from -20 to 70 °C (i.e. in places where temperature and humidity are not regulated, with a threat of occurrence of condensation, dripping water and formation of ice, without a special threat of an attack with biological agents, with vibrations of small significance and not situated close to sources of dust and sand).

ORDERING TEMPERATURE SENSORS

The purchase order shall specify

- Name
- Product ordering number
- Ex ia design is ordered using codes J4X, D2X or D3X according to table 1
- Additional requirements for sensor design pursuant to Table 2
- Request for other documentation pursuant to Table 2
- Measuring range
- If calibration is required and in what temperature points
- If the delivery of thermowell and nipple pursuant to the type 991 is required for the sensor as accessories
- If the delivery of gland for output cable pursuant to the type 991 is required for the sensor as accessories
- If optional accessories to the sensor with programmable converter is required
- Other (special) requirements
- Number of pieces

Behind the ordering number specified pursuant to the above mentioned table, the customer shall identify the required range of measured temperature (i.e. lower and upper temperature limits in °C) and, as the case may be, other non-standard required parameters for converter configuration (e.g. indication of sensor tripping, dampening, required designation - tagging etc.).

PURCHASE ORDER EXAMPLE

Standard design:

Resistance temperature sensor Ex d (Ex t) with thermowell ČSN without converter
244 412 311 1B/J4/Q1
Calibration points of 100, 250 and 400 °C
Range -70 to 450°C
6 pcs

Special request:

Resistance temperature sensor Ex d (Ex t) with thermowell ČSN with converter
244 912 111 1B/18/2.1
Nominal length L 380 mm
Range 0 to 100°C
6 pcs

ORDERING ACCESSORIES

The purchase order shall specify:

- Name
- Product ordering number
- Number of pieces

PURCHASE ORDER EXAMPLE

Standard design:

1. Nipple
991 NVP4 M27 72
6 pcs
2. Cable gland
991 VM 612
5 pcs

Special request:

Nipple
991 NVP4 D27 99
material 1.5415
6 pcs

TABLE 1 - DESIGN OF TEMPERATURE SENSORS Ex d (Ex t, Ex i) WITH THERMOWELL ČSN, TYPE 244

SPECIFICATIONS						ORDERING NUMBER																
						244	x	x	x	x	1	x	x	/xxxxxx	/xxx							
Nominal length L [mm]	100	Length of adapter L _n [mm]	135	Length of measuring insert L _{mv} [mm]	280	1																
	160				340	2																
	250				430	3																
	400				580	4																
	630				810	5																
	Other (min. 75) *)					9																
Nominal length L [mm]	100	Length of adapter L _n [mm]	65	Length of measuring insert L _{mv} [mm]	210	1																
	160				270	2																
	250				360	3																
	400				510	4																
	630				740	5																
	Other (min. 75))					9																
Length of adapter	135 mm					1																
	65 mm max. measuring range [°C] -70 to 250					2																
	Other (min. 47 mm) *)**)					9																
Thermowell material	1.4571 ****)		max. measuring range [°C]	70 to 400		1																
	1.4541 ****)			-70 to 600 ****)		2																
	Other *) **)					9																
Connecting thread	G1/2								1													
	G1								2													
	M27x2								3													
	G3/4								4													
	3/4-14 NPT								5													
	M20x1.5								6													
Head of the sensor with thread for gland Ex d (Ex t) - overview of glands see Tab.5	Aluminium alloy painted with blue epoxy colour			M20x1.5						1												
				1/2-14NPT								2										
	Corrosion-resistant steel 1.4401			M20x1.5							3											
				1/2-14NPT								4										
Tube of measuring insert [mm]													1									
Measuring resistor (sensing probe)	Pt100																		1			
	Pt 500																		2			
Tolerance class	A guaranteed only within range to 300°C																			A		
	B																			B		
Connection of the terminal board	Single - four-wire (1xPt)																			/J4		
	Double - two-wire (2xPt/B)																			B	/D2	
	Double - three-wire (2xPt)																				/D3	
	Single – four-wire		only for Pt 100, with measuring insert ø 6, length of measuring insert L _{mv} 100 – 3025 [mm]								1	1									/J4X	
	Double – two-wire										1	1	B								/D2X	
	Double – three-wire										1	1									/D3X	

TABLE 1 - DESIGN OF TEMPERATURE SENSORS Ex d (Ex t, Ex i) WITH THERMOWELL ČSN, TYPE 244
(Continuation)

SPECIFICATIONS					ORDERING NUMBER															
					244	x	x	x		x	1	x	x	/xxxxxx	/xxx					
Converter type	Galvanic separation	Ex ia	NFC	Range [°C]																
				Analogue	INPAL 420			-50 to 50												/07
-30 to 70																		/55		
0 to 50																			/15	
0 to 100																			/18	
0 to 150																			/19	
0 to 200																			/20	
0 to 250																			/21	
Programmable	e			0 to 400	1											/23				
				TH 100														/TH100		
				TH 100-ex		•													/TH100X	
				TH 200	•														/TH200	
				TH 200-ex	•	•													/TH200X	
				IPAQ-H	•														/IPAQH	
				IPAQ-HX	•	•													/IPAQHX	
				MINIPAQ-HLP															/MINIPAQ	
				APAQ C130			•												/C130	
				IPAQ C202															/C202	
				IPAQ C202X		•													/C202X	
				IPAQ C330	•														/C330	
				IPAQ C330X	•	•													/C330X	
				IPAQ C520	•														/C520	
				IPAQ C520S *****	•														/C520S	
IPAQ C520X	•	•													/C520X					
IPAQ C520XS *****	•	•													/C520XS					
IPAQ C530	•		•												/C530					
IPAQ C530X	•	•	•												/C530X					
TH 300	•														/TH300					
TH 300-ex	•	•													/TH300X					
248 HANA	•														/248HANA					
248HA11	•	•													/248HA11X					
644 HA NA	•														/644HANA					
644 HA I1	•	•													/644HA11X					
Other *)															/99					
Without converter (for converter installation by customer)															/00					
LED display to loop 4-20 mA (not possible with head from corrosion resistant steel) (only with converter INPAL 420, APAQ-HRF, TH 100, MINIPAQ-HLP)					LPI-02											/LD				
Special design for negative temperatures -196°C *)																/CT				
Special design for extreme negative temperatures -269°C *)																/ECT				

Standard design

- *) Only as a special request after an agreement with the manufacturer
- **) In case of adapter length below 135 mm (minimum 65 mm), the temperature range is decreased to -70 to 250 °C.
- ***) For Zone 0, a thermowell from corrosion-resistant alloy shall be used (pursuant to EN 60079-26)
- ****) Up to 600°C in case of a type of installation pursuant to Figure 6
- *****) Thermowells of these materials are suitable for contact with food
- *****) Functional safety SIL2

TABLE 2 – ADDITIONAL REQUIREMENT FOR DESIGN OF TEMPERATURE SENSORS Ex d (Ex t, Ex i) TO THERMOWELL ČSN, TYPE 243

SPECIFICATIONS				CODE		
PROOF OF METROLOGICAL COMPLIANCE	DESIGN OF TEMPERATURE SENSORS	MEASURING RANGE [°C]		USE		
Proof of metrological compliance pursuant to Directive No. 2014/32/EU (MID), Annex MI-004 *)	couple sensors without converter in connection 1xPt100/..1/4 min. length of measuring insert Ø 6 mm = 210 mm min. immersion = 160 mm	0 to 180		application for residential and business premises and for the light industry	/M5	
CALIBRATION (for sensors as described below)	DESIGN OF TEMPERATURE SENSORS	MEASURING RANGE [°C]		USE		
Calibration by TPM 3342-94, in three calibration points evenly distributed in the sensor measuring range for use as part of the customer's measurement assemblies pursuant to Directive No. 2014/32/EU (MID), Annex MI-002 and MI-005 *)	sensors without converter in connection 1xPt100/..1/4 min. length of measuring insert for temperature to 250°C Ø 6 mm = 210 mm for temperature over 250°C Ø 6 mm = 275 mm	-50 to 50		application for residential and business premises and for the light industry	/M1	
		-50 to 100			/M2	
		0 to 200			/M3	
		0 to 250	for sensors with extension lengths shorter than 125 mm (min. 65 mm)		/M4	
		0 to 300	for sensor with measuring resistance in tolerance class A			
0 to 400	for sensors with extension lengths 125 mm and longer, with measuring resistance in tolerance class B					
CALIBRATION	NUMBER OF CALIBRATION POINTS	CALIBRATION RANGE				
Calibration by TPM 3342-94, define calibration points	3	0 to 420 °C		/Q1		
	3	0 to 600 °C		/Q2		
	3	-196 to 100 °C		/Q3		
	3	-50 to 600 °C		/Q22		
	Other	-50 to 600 °C		/Q9		
REQUIREMENT FOR OTHER DOCUMENTATION		USE				
Copy of EU-Type Examination Certificate (pursuant to Directive No. 2014/32/EU)		M5				/MID
Copy of Evaluation certificate No. ZR 141/10-0068		M1, M2, M3, and M4				/EC
EU Declaration of Conformity		for design with converter				/EU
Copy of EU-Type Examination Certificate acc to the 2014/34/EU		for fixed closure and a dust-tight closure				/Exd
Copy of EU-Type Examination Certificate acc to the 2014/34/EU		for Ex ia design				/Exi
Copy of the Inspection Certificate 3.1 acc to EN 10204 for material of thermowell with the heat number						/3.1
Declaration of Conformity with purchase order 2.1 pursuant to EN 10204						/2.1

Specify the code behind ordering number. Define calibration points for codes Q1, Q2, Q3, Q22 and Q9.

*) only as a special request after an agreement with the manufacturer

TABLE 3 – ACCESSORIES - OVERVIEW OF DESIGNS RECOMMENDED NIPPLES, TYPE 991 (order separately)

SPECIFICATION					ORDERING NUMBER					
					991	xxx	x	xxx	xx	
Shape	Direct nipple					NVP				
	Oblique (chamfer 45°)					NVS				
Internal bore	M20x1,5	for embed sealing ring	PN	40			1	M20		
	G 1/2							G12		
	M20x1,5	without embed for sealing ring							M20	
	G 1/2						2	G12		
	M27x2			160					M27	
	G 3/4							G34		
	3/4 – 14 NPT								N34	
	G1								G01	
Other *)								999		
Material	1.0308 or 1.0122	surface treatment	preservation with grease – oil	maximum operation temperature [°C]	300 (only PN 40)				M20	13
								G12		
								M27		
								G34		
	1.0577						400			
15 128.5/14MoV6-3			550				M27	51		
							G34			
							N34			
1.4541		-	550						72	
Other *)		pursuant to material		pursuant to material					99	

*) upon a special requirement after an agreement with the manufacturer

TABLE 4 –OVERVIEW OF SEALING RINGS TYPE 991 SUPPLIED TO TEMPERATURE SENSORS

EXTERNAL FIXING THREAD OF TEMPERATURE SENSORS	SEALING RING			
	DIMENSION [mm] Ød x ØD x t	MATERIAL	NUMBER	ORDERING NUMBER
M20x1,5 G1/2	21×27x2	copper thermally insulating insert	1 Pcs	991 TK 21
M27x2 G3/4				33×39x2
G1	copper	991 TK 33		
3/4-14 NPT	-	-	-	-

The sealing ring is supplied to each sensor by default, only for the sensor with internal thread 3/4-14NPT the sealing ring is not supplied. The sealing ring can also be ordered separately using ordering number

TABLE 5 - OVERVIEW OF DESIGNS AND ORDERING OF CABLE GLANDS Ex d (Ex t) BRASS – TYPE 991

SPECIFICATION							Ordering number			
							991	xx	xxx	
Gland Ex d (Ex t) brass		Cable clamp (clamping module)			Thread	Torque of gland body	For cable Ø [mm]			
Size	Wrench		Size	Dimension						
	A	B		C	Ds					
No. 4	OK 17	OK 24	No. 4	5	20	M20x1.5	30 - 35 Nm	4,5-8.5	VM	458
No. 5	OK 19		No. 5	5	22			7-11	VM	711
No. 6	OK 24		No. 6	6	27.5			10-16	VM	016
No. 4	OK 17		1/2-14 NPT	No. 4	5	20	25 - 30 Nm	4,5-8.5	VK	458
No. 5	OK 19			No. 5	5	22		7-11	VK	711
No. 6	OK 24			No. 6	6	27.5		10-15.5	VK	015

INSTALLATION AND CONNECTION

SENSOR INSTALLATION

Install the sensors by screwing into the nipple on the piping (technological equipment) or welded into the piping wall. Before the installation, put on the enclosed sealing ring in advance (for thread 3/4-14NPT, the sealing ring is not used). During the installation torque of 70 Nm is recommended for thread M20 x 1,5, G 1/2 and 3/4-14NPT and. torque of 150 Nm it is recommended for thread M27 x 2 a G3/4.

A proposal of securing the thermowell of the temperature sensors Ex d for nominal lengths exceeding 630 m is in Figure 1; examples of installation of direct and angular nipples are in Figure 7.

With respect to maintaining metrological properties and the longest possible service life, it is not recommended to install the sensors in places with high turbulence of the medium, which is caused e.g. by a rapid transition from a small diameter of the piping to a larger one (when failing to comply with the required shape and dimensions of diffuser behind the flow meter), etc. Recommended distance of the temperature sensor from the installation flange of the flow meter is min. 1 m.



WARNING



The temperature sensor may be install to the thermowell located in the zone 0 (20), zone 1 (1) or zone 2 (22).

The other parts of the sensor (fitting, adapter, connecting head) may be located in zone 1 (21) or zone 2 (22).

When installing sensor in the thermowell located in zone 20, a pre-fuse with the following parameters must be used in the converter encoder circuit: Ceramic, quick break (F), short circuit resistance 1500A (H), e.g. ceramic tube fuse Ø5 x 20 mm, F100mA.

Distance of the fixed closure Ex d IIC from close structures or between the closures shall be at least 40 mm.

The temperature sensor with a paint finish must be installed in an explosive atmosphere with dust so as to avoid the occurrence of creep discharges

INSTALLATION OF CABLE GLAND

To secure the fixed and dust-tight closure, only the certified cable gland Ex d IIC (Ex tb IIIC) with Ingress protection IP 68 shall be used (refer to accessories 991 or another similar gland). It shall be tightened in the sensor head in the prescribed way.

Torque of gland body:

- a) for gland with thread 1/2 - 14NPT 25 – 30Nm
- b) for gland with thread M20x1.5 30 – 35Nm

Installation of the cable in the gland, its sealing and securing against pull-out shall be realized pursuant to the instruction sheet of the gland supplier.



WARNING

Do not use other sealing rings in the gland than the original ones delivered by the manufacturer. Do not change

artificially the outer diameter of the cable e.g. by winding it around with electrical insulating tapes.

ELECTRICAL CONNECTION

The electrical connection may be only realized by qualified workers.

The sensor installation in conditions with explosive gaseous atmosphere or flammable dust shall comply with the requirements of EN 60079-14.

The terminal board of the sensor (converter) is accessible after the unscrewing of the lid of the head.

Connect the evaluation devices to the sensor with a non-armoured cable with double insulation (internal wires with Cu core with cross-section 0.5 to 1.5 mm²).

Seal the cable in the gland by prescribed tightening of the closing nut pursuant to instruction sheet of the gland. Then secure it with clamp against pull-out.



WARNING



The connecting cable must have a casing of thermoplastic, thermoset or elastomeric materials. The cable must be circular and compact, the filler or shell must be extruded and the filler material, if used, must be non-absorbent. The length of the connecting cable must be at least min. 3 m. Temperature resistance of the cable shall comply with the ambient temperature!

The cable insulation shall have chemical and mechanical resistances in compliance with the conditions, in which the cable will be installed. It is recommended supporting the cable along its length between the sensor and the follow-up device. In the environment with interfering signals, use a shielded cable in the power supply circuit. Shielding may be only grounded (earthed) in one point. The cable should not be placed together with power cables.

In case of the sensor with HART protocol converter, the maximum length of wiring is defined by the arrangement of wires of the connecting cable. The total length of wiring may be up to 1500 m. It requires a twisted two-wire with shared shielding with the cross section of the core min. 0.5 mm². The HART communicator is connected to the supply loop of the sensor with converter pursuant to Figure 2. To ensure reliable commutation, there shall be total load resistance of min. 250 Ω in the circuit of the output loop.



WARNING




Programmable converter may not be connected to a computer or a HART communicator, if the converter is located in explosive environment.

The surface temperature of the converter must not exceed the maximum surface temperature for a given temperature class.

For installation in a dangerous area, a connection is required (placing on the same potential). You can use the terminals on the sensor head to do this.

The sensor need not be connected separately to the interconnection system if it is firmly attached and metallically connected to the components or piping that is connected to the interconnection system.

SENSOR HEAD WITH TERMINALS

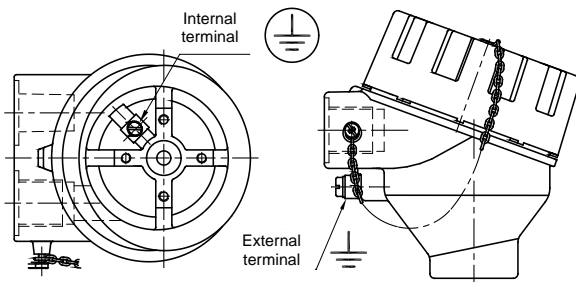

Maximum cross-section of wire for connection to external and internal clamps:

Internal clamp: stranded wire 1.5 mm², full wire 2.5 mm²
 External clamp: stranded wire 4.0 mm², full wire 6.0 mm²
 If stranded wires are used for the interconnection, they shall be protected against fraying with pressing hollow.

CLOSING HEAD OF FIXED CLOSURE Ex d

After electrical connection of the sensor, the lid of the head shall be fully tightened by hand, then released slightly to ensure matching with the closest groove against the securing pin and fixed by this screw against releasing. If the lid of the sensor is not tightened and secured with the above mentioned screw, the sensor does not comply with the requirements of fixed closure Ex d.

WARNING: Electric supply of the sensor may not be connected before closing the fixed closure!

SENSOR INSTALLATION WITHOUT CONVERTER AND SENSOR WITH CONVERTER Ex ia TO ZONE 0 (20)

WARNING: The user is responsible for ensuring that during operation in zone 0 is between the sensor head from an aluminium alloy and other equipment preclude any risk of ignition due to impact and friction.

The sensor without converter can be used, in case of the installation pursuant to EN 60079-11, Art. 5.7 in the intrinsically safe circuit Ex ia according to EN 60079-25), as a simple equipment. For simple equipment, the maximum temperature can be determined from the value of the P0 of the follower and the temperature class is determined.

Sensor with converter Ex ia can be used while adhering to the Ex ia parameters of the converter shall be complied with pursuant to the enclosed converter manual.

In intrinsically safe circuits, only insulated cables that are capable of withstanding an electrical strength test with a voltage equal to twice the voltage in the intrinsically safe circuit or 500 V eff (DC 750 V) must be used, with a larger value being taken.

When installing intrinsically safe circuits, including cables, do not exceed the maximum allowable inductance, capacity or ratio LiR and surface temperature. Permissible values are determined from the documentation of the connecting device or label. Place follow-up equipment out of the danger area. An intrinsically safe source approved for supplying intrinsically safe devices in accordance with EN 60079-11 must always be used.

The shield of the intrinsically safe circuit cable must be grounded in the same place as the intrinsically safe circuit, the connection must be outside the dangerous area.

If the intrinsically safe circuit is isolated from the ground, the shield must be connected in one place to the protective interconnection system. This can be using the terminals on the sensor head.

COMMISSIONING

After the sensor installation, including closing the fixed closure and connection of the follow-up (evaluation) device to the supply

voltage (and the settlement period of the converter), the equipment is prepared for operation.

WARNING After installation must be require initial inspection equipment and installations according to EN 60079-17

OPERATION AND MAINTENANCE

The sensor does not require any operation; maintenance and follow-up regular periodic revisions or permanent supervision of expert staff shall be realized pursuant to ČSN EN 60079-17.

WARNING Any intervention into the sensor and its structure will result in a change of properties and can result in an explosion!

SENSOR UNINSTALLATION

WARNING Temperature sensor is in design Ex and must be disconnected from the power supply source before opening the lid of the head and releasing the cable gland in the explosive environment!

Then release the securing screw of the lid with ALLEN key 1.5 mm (a part of accessories). The terminal board of the sensor (converter) is accessible after unscrewing the lid of the head. Measuring insert of the sensor can be replaced and is uninstalled from the head after disconnecting the cable by releasing two screws.

Before a complete uninstallation of the sensor, the wire for mutual interconnection shall be released from the external clamp or the internal clamp on the sensor.

Disconnect the connecting cable from the terminal board; then release it from the clamp on the gland and from closing nut of the gland. Unscrew the sensor from the thermowell; torque for releasing is approx. 70 Nm. While releasing the screw union of the sensor, the thermowell may never be released.

SPARE PARTS

Spare parts shall be delivered by the manufacturer. Relevant measuring inserts can be ordered pursuant to the following table:

SPECIFICATION	ORDERING NUMBER						
	MV240	/xxx/	1	x	x	/xxxx	
Length of measuring insert [mm]		pursuant to tab. 1	1				
Sensing probe	Pt100			1			
	Pt 500			2			
Tolerance class	A				A		
	B				B		
Connection of terminal board or converter	Pt100/ /4					/J4	
	2xPt100/B/2				B	/D2	
	2xPt100/ /3					/D3	
	Pt/ /4 *)			1	1	/J4X	
	2xPt/B/2 *)			1	1	B	/D2X
	2xPt/ /3 *)			1	1		/D3X
Converter pursuant to tab. 1						/converter	

*) Ex ia design

PURCHASE ORDER EXAMPLE OF MEASURING INSERT

Resistance measuring insert without converter
 240 /430/ 11B/J4
 6 pcs

To order the certified measuring inserts, specify the code according to Table 2 – Additional requirements – behind the ordering number.

The measuring inserts are marked according to Article DESIGNATION. Designation is completed with the ordering number.

Each delivery includes

- Delivery note
- Measuring insert pursuant to the purchase order
- Optional accessories to the measuring insert with a programmable converter
 - o Configuration program according to the required converter
 - o Communication modem (for serial port RS 232C) according to the required converter
- Accompanying technical documentation in Czech
 - o Product manual
 - o Product quality and completeness certificate, which also serves as the warranty certificate
 - o EU Declaration of Conformity (for Ex ia design)

If it is established in the purchase contract or agreed otherwise, the following documentation can be also delivered with the product

- Calibration sheet (for calibrated design)
- EU Declaration of Conformity (for design with converter)
- Declaration of Conformity of the supplier according to EN ISO/IEC 17050-1
- Copy of EU-Type Examination Certificate pursuant to the Directive No 2014/34/EU for Ex ia design

WARRANTY

The warranty period is 24 months from the receiving of the product by the customer, unless established otherwise in the contract. Rejection of defects shall be enforced in writing at the manufacturer within the warranty period. The rejecting side shall identify the product name, ordering and manufacturing numbers, date of issue and number of the delivery note, clear description of the occurring defect and the subject of the claim. If the rejecting side is invited to send the device for repair, it shall do so in the original package of the manufacturer and/or in another package ensuring safe transport.

The warranty shall not apply to defects caused by unauthorized intervention into the device, its forced mechanical damage or failure to comply with operation conditions of the product and the product manual.

REPAIRS

The sensors shall be repaired by the manufacturer. They shall be sent for repair in the original or equal package without accessories.

DISABLING AND LIQUIDATION


The product and its package do not include any parts that could impact the environment.

The products that are withdrawn from operation, including their packages (with the exception of products marked as electrical equipment for the purposes of return withdrawal and separate salvage of electrical waste), may be disposed of to sorted or unsorted waste pursuant to the type of waste.

The manufacturer realizes free return withdrawal of marked electrical equipment (from 13.8.2005) from the consumer and points out the danger connected with their illegal disposal.

The package of the sensor can be recycled completely. Metal parts of the products are recycled, non-recyclable plastic materials and electrical waste shall be disposed of in accordance with applicable legislation.

FIGURE 1 - PROPOSAL OF SECURING THERMOWELL OF TEMPERATURE SENSORS EX d (for nominal lengths exceeding 630 mm)

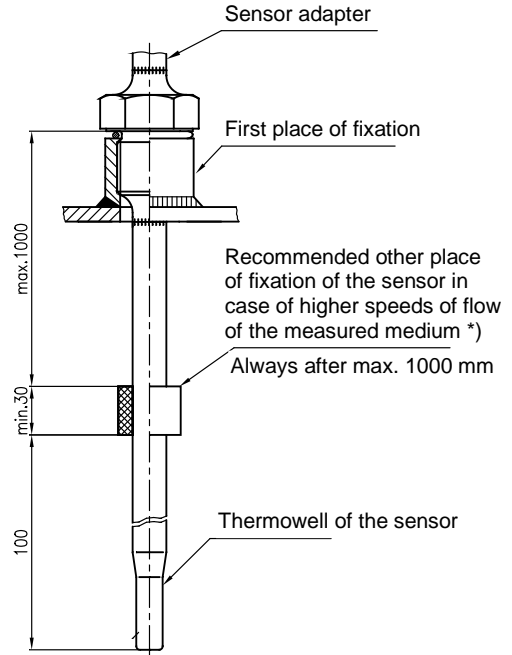

*) In case of flow of the measured medium, the thermowells are stressed with dynamic effects of the flowing medium and this stress depends on the speed of flow, physical properties of the measured medium and immersion length of the thermowell. If the occurrence of such dynamic effects can be expected, it is recommended to realize further fixation of the sensor thermowell pursuant to the above mentioned proposal.

FIGURE 2- EXAMPLE OF OPERATION CONNECTION OF TEMPERATURE SENSOR WITH CONVERTER IN LOOP 4 - 20 MA


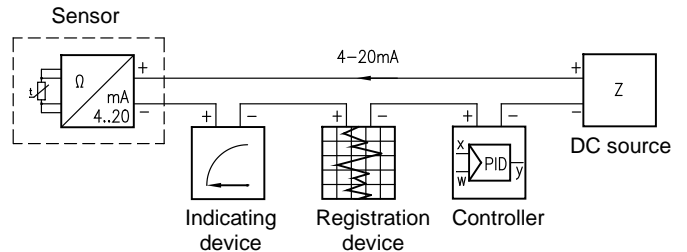



FIGURE 3 - SCHEME OF CONNECTION OF TEMPERATURE SENSORS

SCHEME OF CONNECTION WITHOUT CONVERTER


J4 - With simple measuring resistor
in four-wire connection
(Pt 100/ /4)

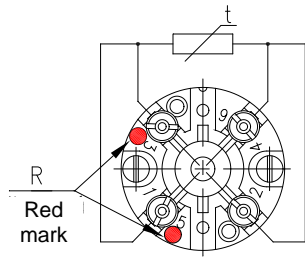

D2 - With double measuring resistor
in two-wire connection
(2 × Pt 100/B/2)

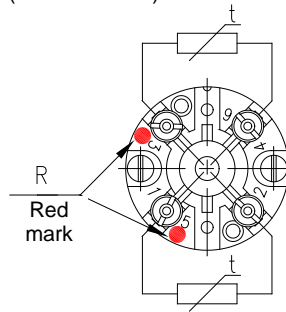


D3 - With double measuring resistor
in three-wire connection
(2 × Pt 100/ /3)

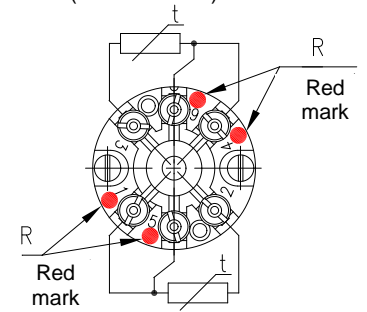


SCHEME OF CONNECTION WITH CONVERTER AND DISPLAY

with converter

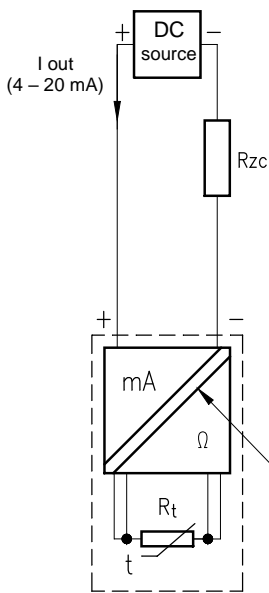


Galvanic separation pursuant to the converter

with converter
with HART protocol

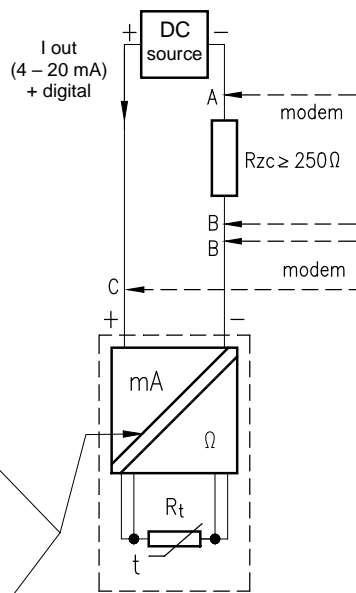


A-B and B-C options of connection of the control unit
(HART modem, HART communicator)

with converter Ex ia

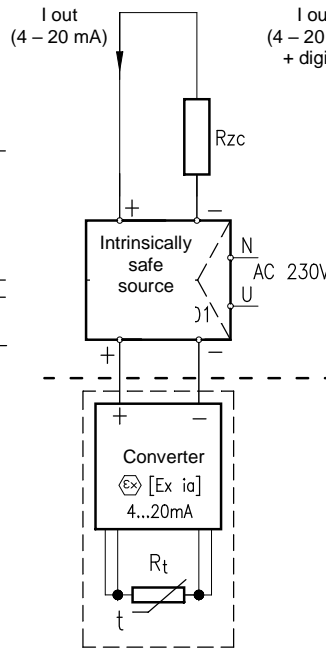

with converter Ex ia
with HART protocol

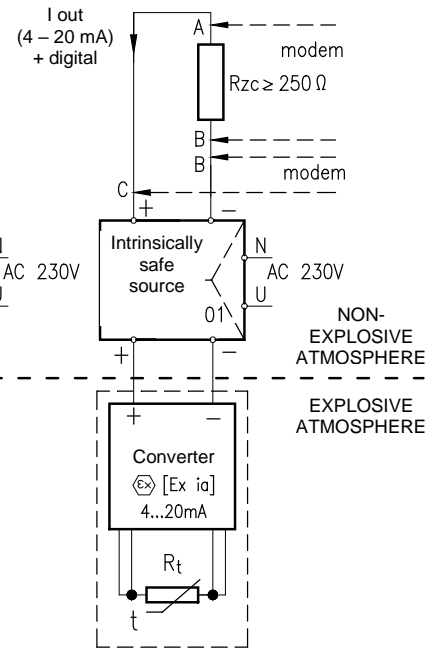

Rzc = total load resistor

FIGURE 4 – MARK OF NON-EXPLOSIVENESS

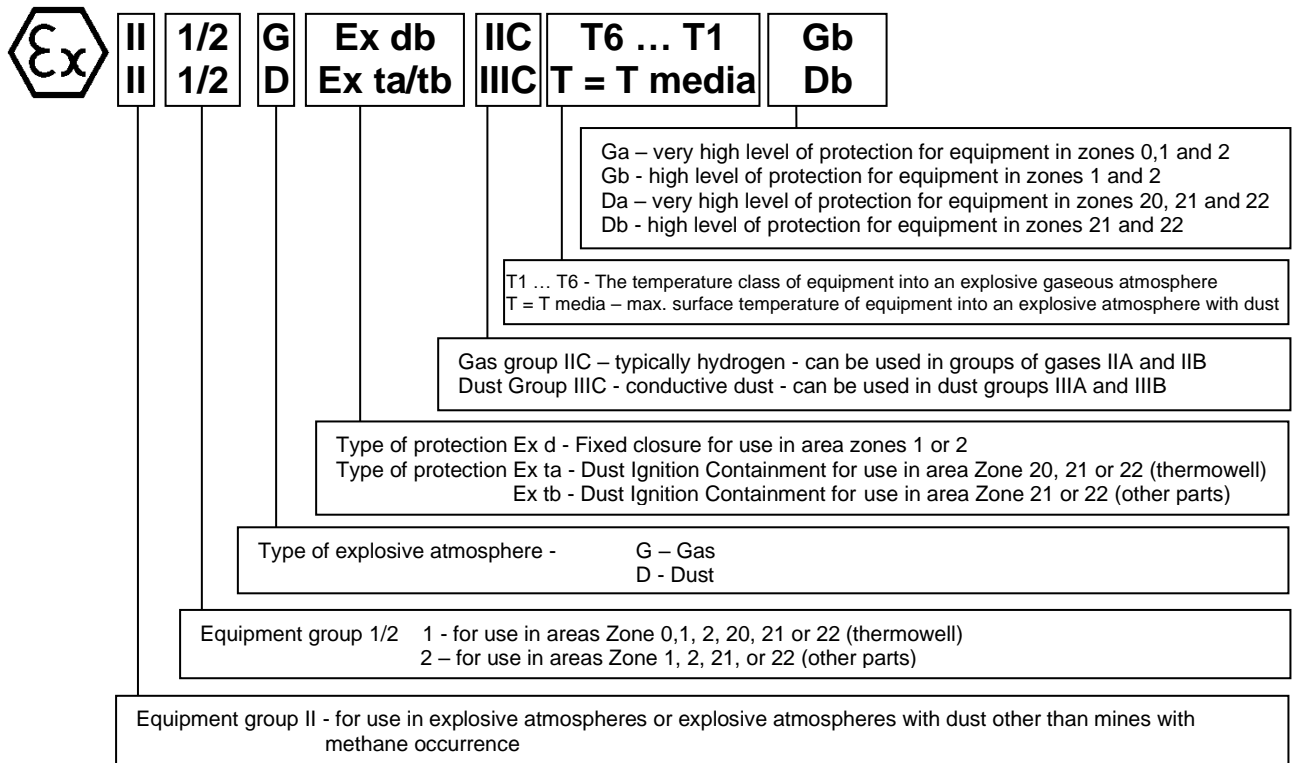


FIGURE 5 - INTRINSICALLY SAFE MARKING

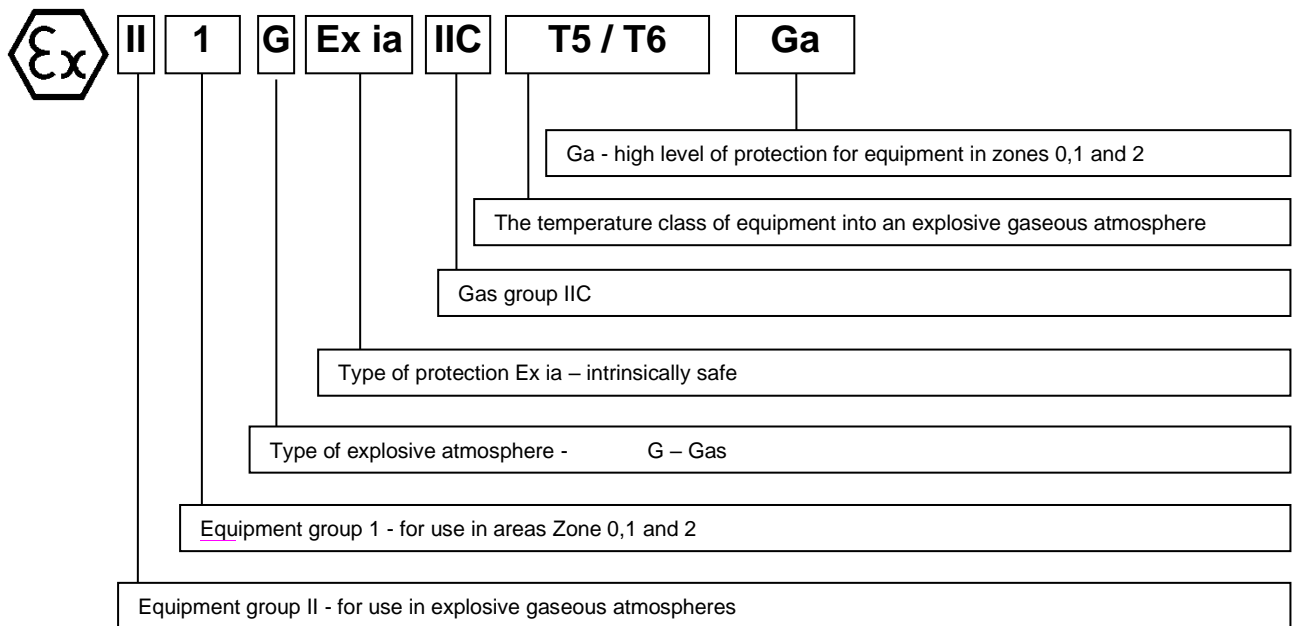


FIGURE 6 - EXAMPLES OF INSTALLATION OF TEMPERATURE SENSORS Ex d WITH THERMOWELL ČSN
 (if a higher upper limit of the measurement range is required than the required temperature class)


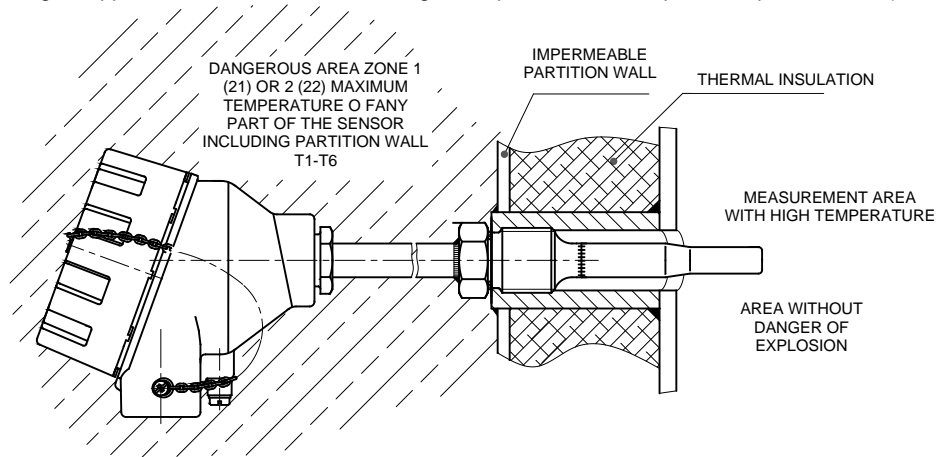


FIGURE 7 - EXAMPLES OF INSTALLATION OF DIRECT AND ANGULAR NIPPLES PURSUANT TO EN 1434-2

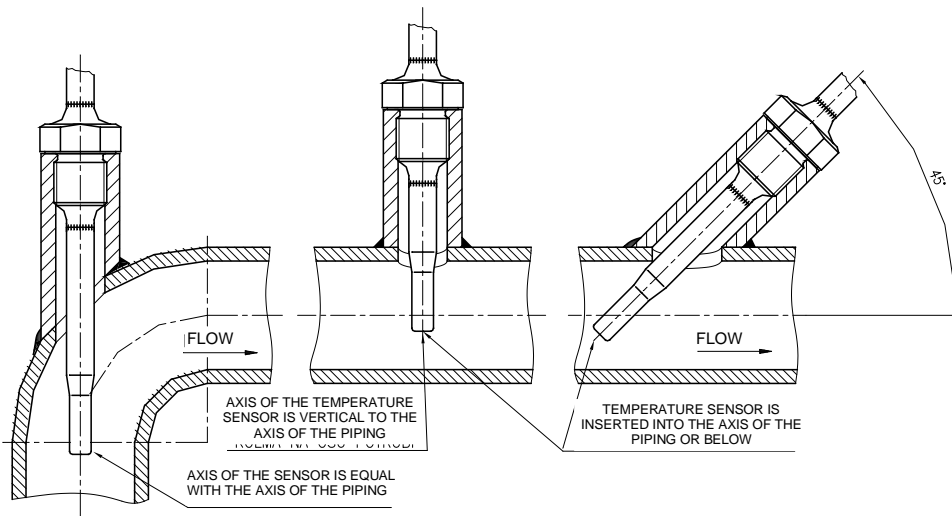

WARNING

- When using the sensor with an angular nipple, locate the sensor with thermowell at an angle against the direction of flow
- The sensor may not touch the opposite side of the piping
- It is also advantageous to use the temperature sensors in the piping elbow. In such a case, locate the sensor with the thermowell against the direction of flow so that the measured medium flows around evenly

May 2024

© ZPA Nová Paka, a.s.



CE 1026

CE M24 1383